



HS-JXM2000_{D,AH,YH}

SERVICE MANUAL

STEREORADIO
CASSETTE RECORDER

BASIC TAPE MECHANISM: 7ZM-1 R1NF

- Replace this Service manual with "Revision Publishing" when it is issued.

aiwa

S/M Code No. 09-005-434-6T1

SIMPLE

DATA

製品を安全に修理(補修)するために

修理の前に「製品を安全に修理(補修)するために」をよくお読みの上、正しく修理を行ってください。
このサービスマニュアルでは、お客様が製品を安全に正しくお使いいただき、お客様や他の人々への危害や財産への損害を未然に防止するために、修理する場合必ず下記の項目をお守りください。

▲注意

この表示を無視して、誤った取り扱いをすると、人が傷害を負ったり物的損害が発生する可能性があります。

1. 注意事項を守ること。

サービスの時、特に注意を要する箇所については、キャビネット、シャーシ、部品などにラベルや捺印で注意事項を表示しています。これらの注意書きおよび取扱説明書等の注意事項を必ずお守りください。

2. スペック銘板・注意ラベル・ヒューズラベル等の表示文字を汚して読みにくくしないこと。

3. 基板パターンの裏付け部品の修理等を行う場合、パターンや部品に指定のボンドを塗布してプリント基板にしっかり固定すること。

4. サービス後は安全点検すること。

サービスのために取り外したネジ、部品、配線がもとどおりになっているか、サービスした個所の周辺で劣化させてしまったところがないかなどを点検してください。(ワイヤー半田付け、引き回し、束線、種類、空間距離)

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	ACCESSORY		82-HK3-951-010	1C	CARRYING, CASE	S	HS-JXM2000
O	ACCESSORY		87-B30-138-010	1H	MIC, CM-MS001	AH1SF	HS-JXM2000
O	ACCESSORY		87-B30-138-010	1H	MIC, CM-MS001	S	HS-JXM2000
O	ACCESSORY		87-B30-138-010	1H	MIC, CM-MS001	YHSSF	HS-JXM2000
O	ACCESSORY		87-B30-298-010	2A	BAT, NB-5G(S)	AH1SF	HS-JXM2000
O	ACCESSORY		87-B30-298-010	2A	BAT, NB-5G(S)	S	HS-JXM2000
O	ACCESSORY		87-B30-298-010	2A	BAT, NB-5G(S)	YHSSF	HS-JXM2000
O	ACCESSORY		87-B30-337-010	--	HEADPHONE, HP-M054	AH1SF	HS-JXM2000
O	ACCESSORY		87-B30-337-010	--	HEADPHONE, HP-M054	S	HS-JXM2000
O	ACCESSORY		87-B30-337-010	--	HEADPHONE, HP-M054	YHSSF	HS-JXM2000
!	O ACCESSORY		87-B30-340-010	1F	CHARGER, RB-107 D (L)	S	HS-JXM2000
!	O ACCESSORY		87-B30-341-110	1F	CHARGER, RB-107 H (L)	AH1SF	HS-JXM2000
O	ACCESSORY		8A-HJ2-951-010	2Y	RC UNIT, RC2000	AH1SF	HS-JXM2000
O	ACCESSORY		8A-HJ2-951-010	2Y	RC UNIT, RC2000	S	HS-JXM2000
O	ACCESSORY		8A-HJ2-951-010	2Y	RC UNIT, RC2000	YHSSF	HS-JXM2000
O	ACCESSORY		8A-HJ2-952-010	1C	CASE, CARRYING BLK	AH1SF	HS-JXM2000
O	ACCESSORY		8A-HJ2-952-010	1C	CASE, CARRYING BLK	YHSSF	HS-JXM2000
X	ACCESSORY		8Z-HK4-080-010	0E	LBL, BAT D	S	HS-JXM2000
X	ACCESSORY		8Z-HK4-081-010	0E	LBL, BAT EX	AH1SF	HS-JXM2000
X	ACCESSORY		8Z-HK4-081-010	0E	LBL, BAT EX	YHSSF	HS-JXM2000
O	ACCESSORY		8Z-HK4-090-010	1E	BOX, BAT ASSY SIL	AH1SF	HS-JXM2000
O	ACCESSORY		8Z-HK4-090-010	1E	BOX, BAT ASSY SIL	S	HS-JXM2000
O	ACCESSORY		8Z-HK4-090-010	1E	BOX, BAT ASSY SIL	YHSSF	HS-JXM2000
X	AF DD CONV		87-600-042-210	0E	WIRE, P0-4-2	AH1SF	HS-JXM2000
X	AF DD CONV		87-600-042-210	0E	WIRE, P0-4-2	S	HS-JXM2000
X	AF DD CONV		87-600-042-210	0E	WIRE, P0-4-2	YHSSF	HS-JXM2000
X	AF DD CONV		87-601-042-210	0E	WIRE, P1-4-2	AH1SF	HS-JXM2000
X	AF DD CONV		87-601-042-210	0E	WIRE, P1-4-2	S	HS-JXM2000
X	AF DD CONV		87-601-042-210	0E	WIRE, P1-4-2	YHSSF	HS-JXM2000
X	AF DD CONV		87-602-042-210	0E	WIRE, P2-4-2	AH1SF	HS-JXM2000
X	AF DD CONV		87-602-042-210	0E	WIRE, P2-4-2	S	HS-JXM2000
X	AF DD CONV		87-602-042-210	0E	WIRE, P2-4-2	YHSSF	HS-JXM2000
O	AF DD CONV	C 0551	87-016-444-080	1B	C-CAP, TN 47-10 M	AH1SF	HS-JXM2000
O	AF DD CONV	C 0551	87-016-444-080	1B	C-CAP, TN 47-10 M	S	HS-JXM2000
O	AF DD CONV	C 0551	87-016-444-080	1B	C-CAP, TN 47-10 M	YHSSF	HS-JXM2000
O	AF DD CONV	C 0552	87-A10-955-080	1A	C-CAP, TN 47-6.3 MCR	AH1SF	HS-JXM2000
O	AF DD CONV	C 0552	87-A10-955-080	1A	C-CAP, TN 47-6.3 MCR	S	HS-JXM2000
O	AF DD CONV	C 0552	87-A10-955-080	1A	C-CAP, TN 47-6.3 MCR	YHSSF	HS-JXM2000
O	AF DD CONV	C 0553	87-016-444-080	1B	C-CAP, TN 47-10 M	AH1SF	HS-JXM2000
O	AF DD CONV	C 0553	87-016-444-080	1B	C-CAP, TN 47-10 M	S	HS-JXM2000
O	AF DD CONV	C 0553	87-016-444-080	1B	C-CAP, TN 47-10 M	YHSSF	HS-JXM2000
S	AF DD CONV	D 0551	87-001-553-080	0E	C-DIODE, 1SS322	AH1SF	HS-JXM2000
S	AF DD CONV	D 0551	87-001-553-080	0E	C-DIODE, 1SS322	S	HS-JXM2000
S	AF DD CONV	D 0551	87-001-553-080	0E	C-DIODE, 1SS322	YHSSF	HS-JXM2000
S	AF DD CONV	IC 0551	87-A20-603-140	1C	C-IC, RN5RK241A	AH1SF	HS-JXM2000
S	AF DD CONV	IC 0551	87-A20-603-140	1C	C-IC, RN5RK241A	S	HS-JXM2000
S	AF DD CONV	IC 0551	87-A20-603-140	1C	C-IC, RN5RK241A	YHSSF	HS-JXM2000
O	AF DD CONV	L 0551	87-A50-174-080	1B	C-COIL, 82UH 7004-2	AH1SF	HS-JXM2000
O	AF DD CONV	L 0551	87-A50-174-080	1B	C-COIL, 82UH 7004-2	S	HS-JXM2000
O	AF DD CONV	L 0551	87-A50-174-080	1B	C-COIL, 82UH 7004-2	YHSSF	HS-JXM2000
O	AF DD CONV	L 0552	87-A50-012-080	0E	C-COIL, 100UH LQH3C	AH1SF	HS-JXM2000
O	AF DD CONV	L 0552	87-A50-012-080	0E	C-COIL, 100UH LQH3C	S	HS-JXM2000
O	AF DD CONV	L 0552	87-A50-012-080	0E	C-COIL, 100UH LQH3C	YHSSF	HS-JXM2000
O	AF DD CONV	L 0553	87-A50-010-080	0E	C-COIL, 22UH LQH3C	AH1SF	HS-JXM2000
O	AF DD CONV	L 0553	87-A50-010-080	0E	C-COIL, 22UH LQH3C	S	HS-JXM2000
O	AF DD CONV	L 0553	87-A50-010-080	0E	C-COIL, 22UH LQH3C	YHSSF	HS-JXM2000
X	AF DD CONV	R 0551	88-104-109-080	0E	C-RES, V 1-1/16W J	AH1SF	HS-JXM2000
X	AF DD CONV	R 0551	88-104-109-080	0E	C-RES, V 1-1/16W J	S	HS-JXM2000
X	AF DD CONV	R 0551	88-104-109-080	0E	C-RES, V 1-1/16W J	YHSSF	HS-JXM2000
O	BIAS OSC	C 0601	87-012-286-080	0E	C-CAP, U 0.01-25 K B	AH1SF	HS-JXM2000
O	BIAS OSC	C 0601	87-012-286-080	0E	C-CAP, U 0.01-25 K B	S	HS-JXM2000
O	BIAS OSC	C 0601	87-012-286-080	0E	C-CAP, U 0.01-25 K B	YHSSF	HS-JXM2000
O	BIAS OSC	C 0602	87-012-282-080	0E	C-CAP, U 4700P-50 K B	AH1SF	HS-JXM2000
O	BIAS OSC	C 0602	87-012-282-080	0E	C-CAP, U 4700P-50 K B	S	HS-JXM2000
O	BIAS OSC	C 0602	87-012-282-080	0E	C-CAP, U 4700P-50 K B	YHSSF	HS-JXM2000
O	BIAS OSC	C 0603	87-012-286-080	0E	C-CAP, U 0.01-25 K B	AH1SF	HS-JXM2000
O	BIAS OSC	C 0603	87-012-286-080	0E	C-CAP, U 0.01-25 K B	S	HS-JXM2000
O	BIAS OSC	C 0603	87-012-286-080	0E	C-CAP, U 0.01-25 K B	YHSSF	HS-JXM2000
O	BIAS OSC	C 0604	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	BIAS OSC	C 0604	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	S	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	BIAS OSC	C 0604	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	BIAS OSC	C 0605	87-012-278-080	0E	C-CAP,U 2200P-50 K B	AH1SF	HS-JXM2000
O	BIAS OSC	C 0605	87-012-278-080	0E	C-CAP,U 2200P-50 K B	S	HS-JXM2000
O	BIAS OSC	C 0605	87-012-278-080	0E	C-CAP,U 2200P-50 K B	YHSSF	HS-JXM2000
O	BIAS OSC	C 0606	87-012-267-080	0E	C-CAP,U 270P-50 K B GRM	AH1SF	HS-JXM2000
O	BIAS OSC	C 0606	87-012-267-080	0E	C-CAP,U 270P-50 K B GRM	S	HS-JXM2000
O	BIAS OSC	C 0606	87-012-267-080	0E	C-CAP,U 270P-50 K B GRM	YHSSF	HS-JXM2000
O	BIAS OSC	C 0607	87-012-267-080	0E	C-CAP,U 270P-50 K B GRM	AH1SF	HS-JXM2000
O	BIAS OSC	C 0607	87-012-267-080	0E	C-CAP,U 270P-50 K B GRM	S	HS-JXM2000
O	BIAS OSC	C 0607	87-012-267-080	0E	C-CAP,U 270P-50 K B GRM	YHSSF	HS-JXM2000
O	BIAS OSC	C 0608	87-012-270-080	0E	C-CAP,U 470P-50 K B	AH1SF	HS-JXM2000
O	BIAS OSC	C 0608	87-012-270-080	0E	C-CAP,U 470P-50 K B	S	HS-JXM2000
O	BIAS OSC	C 0608	87-012-270-080	0E	C-CAP,U 470P-50 K B	YHSSF	HS-JXM2000
O	BIAS OSC	C 0609	87-012-270-080	0E	C-CAP,U 470P-50 K B	AH1SF	HS-JXM2000
O	BIAS OSC	C 0609	87-012-270-080	0E	C-CAP,U 470P-50 K B	S	HS-JXM2000
O	BIAS OSC	C 0609	87-012-270-080	0E	C-CAP,U 470P-50 K B	YHSSF	HS-JXM2000
O	BIAS OSC	L 0601	8A-HJ2-605-080	1B	C-COIL,OSC BIAS	AH1SF	HS-JXM2000
O	BIAS OSC	L 0601	8A-HJ2-605-080	1B	C-COIL,OSC BIAS	S	HS-JXM2000
O	BIAS OSC	L 0601	8A-HJ2-605-080	1B	C-COIL,OSC BIAS	YHSSF	HS-JXM2000
O	BIAS OSC	L 0602	87-A50-012-080	0E	C-COIL, 100UH LQH3C	AH1SF	HS-JXM2000
O	BIAS OSC	L 0602	87-A50-012-080	0E	C-COIL, 100UH LQH3C	S	HS-JXM2000
O	BIAS OSC	L 0602	87-A50-012-080	0E	C-COIL, 100UH LQH3C	YHSSF	HS-JXM2000
S	BIAS OSC	Q 0601	89-413-284-080	0E	C-TR,2SD1328T	AH1SF	HS-JXM2000
S	BIAS OSC	Q 0601	89-413-284-080	0E	C-TR,2SD1328T	S	HS-JXM2000
S	BIAS OSC	Q 0601	89-413-284-080	0E	C-TR,2SD1328T	YHSSF	HS-JXM2000
S	BIAS OSC	Q 0602	87-026-596-080	0E	C-TR,UMH9	AH1SF	HS-JXM2000
S	BIAS OSC	Q 0602	87-026-596-080	0E	C-TR,UMH9	S	HS-JXM2000
S	BIAS OSC	Q 0602	87-026-596-080	0E	C-TR,UMH9	YHSSF	HS-JXM2000
S	BIAS OSC	Q 0603	87-026-596-080	0E	C-TR,UMH9	AH1SF	HS-JXM2000
S	BIAS OSC	Q 0603	87-026-596-080	0E	C-TR,UMH9	S	HS-JXM2000
S	BIAS OSC	Q 0603	87-026-596-080	0E	C-TR,UMH9	YHSSF	HS-JXM2000
X	BIAS OSC	R 0601	88-108-229-080	0E	C-RES,U 2.2-1/16W J	AH1SF	HS-JXM2000
X	BIAS OSC	R 0601	88-108-229-080	0E	C-RES,U 2.2-1/16W J	S	HS-JXM2000
X	BIAS OSC	R 0601	88-108-229-080	0E	C-RES,U 2.2-1/16W J	YHSSF	HS-JXM2000
X	BIAS OSC	R 0602	88-108-332-080	0E	C-RES,U 3.3K-1/16W J	AH1SF	HS-JXM2000
X	BIAS OSC	R 0602	88-108-332-080	0E	C-RES,U 3.3K-1/16W J	S	HS-JXM2000
X	BIAS OSC	R 0602	88-108-332-080	0E	C-RES,U 3.3K-1/16W J	YHSSF	HS-JXM2000
O	BIAS OSC	S 0601	87-A90-419-080	0E	C-SW,SL 1-1-3 SS-350-B13B-C-T	AH1SF	HS-JXM2000
O	BIAS OSC	S 0601	87-A90-419-080	0E	C-SW,SL 1-1-3 SS-350-B13B-C-T	S	HS-JXM2000
O	BIAS OSC	S 0601	87-A90-419-080	0E	C-SW,SL 1-1-3 SS-350-B13B-C-T	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-001-010	2A	LID,CASS ASSY	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-001-010	2A	LID,CASS ASSY	S	HS-JXM2000
O	CABITY		8A-HJ2-001-010	2A	LID,CASS ASSY	YHSSF	HS-JXM2000
X	CABITY		8A-HJ2-002-010	--	LID,CASS	AH1SF	HS-JXM2000
X	CABITY		8A-HJ2-002-010	--	LID,CASS	S	HS-JXM2000
X	CABITY		8A-HJ2-002-010	--	LID,CASS	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-003-010	--	WINDOW,CASS	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-003-010	--	WINDOW,CASS	S	HS-JXM2000
O	CABITY		8A-HJ2-003-010	--	WINDOW,CASS	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-004-010	2M	CABI,REAR M2K	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-004-010	2M	CABI,REAR M2K	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-005-010	--	FRAME,CENTER	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-005-010	--	FRAME,CENTER	S	HS-JXM2000
O	CABITY		8A-HJ2-005-010	--	FRAME,CENTER	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-006-010	--	FRAME,R	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-006-010	--	FRAME,R	S	HS-JXM2000
O	CABITY		8A-HJ2-006-010	--	FRAME,R	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-007-010	--	FRAME,L	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-007-010	--	FRAME,L	S	HS-JXM2000
O	CABITY		8A-HJ2-007-010	--	FRAME,L	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-008-010	--	LID,BAT	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-008-010	--	LID,BAT	S	HS-JXM2000
O	CABITY		8A-HJ2-008-010	--	LID,BAT	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-009-010	--	PANEL,CONT	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-009-010	--	PANEL,CONT	S	HS-JXM2000
O	CABITY		8A-HJ2-009-010	--	PANEL,CONT	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-010-010	--	WINDOW,LCD	AH1SF	HS-JXM2000
O	CABITY		8A-HJ2-010-010	--	WINDOW,LCD	YHSSF	HS-JXM2000
O	CABITY		8A-HJ2-021-010	2M	CABI,REAR 990	S	HS-JXM2000
O	CABITY		8A-HJ2-023-010	--	WINDOW,LCD 20	S	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	CABITY		8A-HJ2-201-010	--	STOPPER, OPEN	AH1SF	HS-JXM2000
X	CABITY		8A-HJ2-201-010	--	STOPPER, OPEN	S	HS-JXM2000
X	CABITY		8A-HJ2-201-010	--	STOPPER, OPEN	YHSSF	HS-JXM2000
O	DOLBY	C 0301	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	DOLBY	C 0301	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	DOLBY	C 0301	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	DOLBY	C 0302	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	DOLBY	C 0302	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	DOLBY	C 0302	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	DOLBY	C 0303	87-012-274-080	0E	C-CAP,U 1000P-50 K B	AH1SF	HS-JXM2000
O	DOLBY	C 0303	87-012-274-080	0E	C-CAP,U 1000P-50 K B	S	HS-JXM2000
O	DOLBY	C 0303	87-012-274-080	0E	C-CAP,U 1000P-50 K B	YHSSF	HS-JXM2000
O	DOLBY	C 0304	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	DOLBY	C 0304	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	S	HS-JXM2000
O	DOLBY	C 0304	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	DOLBY	C 0305	87-A10-827-080	0E	C-CAP,U 0.47-6.3 K B	AH1SF	HS-JXM2000
O	DOLBY	C 0305	87-A10-827-080	0E	C-CAP,U 0.47-6.3 K B	S	HS-JXM2000
O	DOLBY	C 0305	87-A10-827-080	0E	C-CAP,U 0.47-6.3 K B	YHSSF	HS-JXM2000
O	DOLBY	C 0306	87-A10-827-080	0E	C-CAP,U 0.47-6.3 K B	AH1SF	HS-JXM2000
O	DOLBY	C 0306	87-A10-827-080	0E	C-CAP,U 0.47-6.3 K B	S	HS-JXM2000
O	DOLBY	C 0306	87-A10-827-080	0E	C-CAP,U 0.47-6.3 K B	YHSSF	HS-JXM2000
O	DOLBY	C 0307	87-A11-058-080	0E	C-CAP,U 0.22-10 K B	AH1SF	HS-JXM2000
O	DOLBY	C 0307	87-A11-058-080	0E	C-CAP,U 0.22-10 K B	S	HS-JXM2000
O	DOLBY	C 0307	87-A11-058-080	0E	C-CAP,U 0.22-10 K B	YHSSF	HS-JXM2000
O	DOLBY	C 0308	87-A11-058-080	0E	C-CAP,U 0.22-10 K B	AH1SF	HS-JXM2000
O	DOLBY	C 0308	87-A11-058-080	0E	C-CAP,U 0.22-10 K B	S	HS-JXM2000
O	DOLBY	C 0308	87-A11-058-080	0E	C-CAP,U 0.22-10 K B	YHSSF	HS-JXM2000
O	DOLBY	C 0309	87-010-746-080	1A	C-CAP,TN 10-4 M 125	AH1SF	HS-JXM2000
O	DOLBY	C 0309	87-010-746-080	1A	C-CAP,TN 10-4 M 125	S	HS-JXM2000
O	DOLBY	C 0309	87-010-746-080	1A	C-CAP,TN 10-4 M 125	YHSSF	HS-JXM2000
S	DOLBY	IC 0301	87-A20-818-040	1D	C-IC,NJM2185AV	AH1SF	HS-JXM2000
S	DOLBY	IC 0301	87-A20-818-040	1D	C-IC,NJM2185AV	S	HS-JXM2000
S	DOLBY	IC 0301	87-A20-818-040	1D	C-IC,NJM2185AV	YHSSF	HS-JXM2000
S	DOLBY	Q 0301	87-026-429-080	0E	C-TR,RN2311	AH1SF	HS-JXM2000
S	DOLBY	Q 0301	87-026-429-080	0E	C-TR,RN2311	S	HS-JXM2000
S	DOLBY	Q 0301	87-026-429-080	0E	C-TR,RN2311	YHSSF	HS-JXM2000
O	DOLBY	R 0301	87-022-252-080	0E	C-RES,U 36K-1/16W F	AH1SF	HS-JXM2000
O	DOLBY	R 0301	87-022-252-080	0E	C-RES,U 36K-1/16W F	S	HS-JXM2000
O	DOLBY	R 0301	87-022-252-080	0E	C-RES,U 36K-1/16W F	YHSSF	HS-JXM2000
O	DTS	C 0951	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	DTS	C 0951	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	DTS	C 0951	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	DTS	C 0952	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	DTS	C 0952	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	DTS	C 0952	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	DTS	C 0953	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	DTS	C 0953	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	DTS	C 0953	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	DTS	C 0954	87-A10-025-080	0E	C-CAP,U 0.22-16 Z F	AH1SF	HS-JXM2000
O	DTS	C 0954	87-A10-025-080	0E	C-CAP,U 0.22-16 Z F	S	HS-JXM2000
O	DTS	C 0954	87-A10-025-080	0E	C-CAP,U 0.22-16 Z F	YHSSF	HS-JXM2000
O	DTS	C 0955	87-A10-535-080	0E	C-CAP,V 22P-50 J CH	AH1SF	HS-JXM2000
O	DTS	C 0955	87-A10-535-080	0E	C-CAP,V 22P-50 J CH	S	HS-JXM2000
O	DTS	C 0955	87-A10-535-080	0E	C-CAP,V 22P-50 J CH	YHSSF	HS-JXM2000
O	DTS	C 0956	87-A10-534-080	0E	C-CAP,V 18P-50 J CH	AH1SF	HS-JXM2000
O	DTS	C 0956	87-A10-534-080	0E	C-CAP,V 18P-50 J CH	S	HS-JXM2000
O	DTS	C 0956	87-A10-534-080	0E	C-CAP,V 18P-50 J CH	YHSSF	HS-JXM2000
O	DTS	C 0957	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	DTS	C 0957	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	DTS	C 0957	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	DTS	C 0958	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	DTS	C 0958	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	DTS	C 0958	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	DTS	C 0959	87-016-296-080	1A	C-CAP,TN 22-4 M	AH1SF	HS-JXM2000
O	DTS	C 0959	87-016-296-080	1A	C-CAP,TN 22-4 M	S	HS-JXM2000
O	DTS	C 0959	87-016-296-080	1A	C-CAP,TN 22-4 M	YHSSF	HS-JXM2000
O	DTS	C 0960	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	DTS	C 0960	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	DTS	C 0960	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	DTS	C 0962	87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	DTS	C 0963	87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000
O	DTS	C 0969	87-012-199-080	0E	C-CAP,U 220P-50 J CH	S	HS-JXM2000
O	DTS	C 0970	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	DTS	C 0970	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	DTS	C 0970	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
S	DTS	IC 0951	87-A21-675-030	2M	C-IC,TC9327AF-506	AH1SF	HS-JXM2000
S	DTS	IC 0951	87-A21-675-030	2M	C-IC,TC9327AF-506	S	HS-JXM2000
S	DTS	IC 0951	87-A21-675-030	2M	C-IC,TC9327AF-506	YHSSF	HS-JXM2000
S	DTS	IC 0952	87-A20-755-080	1B	C-IC,AK93C45AF	AH1SF	HS-JXM2000
S	DTS	IC 0952	87-A20-755-080	1B	C-IC,AK93C45AF	S	HS-JXM2000
S	DTS	IC 0952	87-A20-755-080	1B	C-IC,AK93C45AF	YHSSF	HS-JXM2000
S	DTS	IC 0953	87-A20-757-040	1A	C-IC,S-80815ANNP-EDC-T2	AH1SF	HS-JXM2000
S	DTS	IC 0953	87-A20-757-040	1A	C-IC,S-80815ANNP-EDC-T2	S	HS-JXM2000
S	DTS	IC 0953	87-A20-757-040	1A	C-IC,S-80815ANNP-EDC-T2	YHSSF	HS-JXM2000
S	DTS	IC 0954	87-A20-902-040	1A	C-IC,S-80809ANNP-E7Z-T2	AH1SF	HS-JXM2000
S	DTS	IC 0954	87-A20-902-040	1A	C-IC,S-80809ANNP-E7Z-T2	S	HS-JXM2000
S	DTS	IC 0954	87-A20-902-040	1A	C-IC,S-80809ANNP-E7Z-T2	YHSSF	HS-JXM2000
S	DTS	IC 0955	87-A20-902-040	1A	C-IC,S-80809ANNP-E7Z-T2	AH1SF	HS-JXM2000
S	DTS	IC 0955	87-A20-902-040	1A	C-IC,S-80809ANNP-E7Z-T2	S	HS-JXM2000
S	DTS	IC 0955	87-A20-902-040	1A	C-IC,S-80809ANNP-E7Z-T2	YHSSF	HS-JXM2000
O	DTS	LCD0951	8A-HJ2-606-010	1C	LCD,AIW4223	AH1SF	HS-JXM2000
O	DTS	LCD0951	8A-HJ2-606-010	1C	LCD,AIW4223	S	HS-JXM2000
O	DTS	LCD0951	8A-HJ2-606-010	1C	LCD,AIW4223	YHSSF	HS-JXM2000
S	DTS	Q 0951	87-026-467-080	0E	C-TR,HN1C01FGR	AH1SF	HS-JXM2000
S	DTS	Q 0951	87-026-467-080	0E	C-TR,HN1C01FGR	S	HS-JXM2000
S	DTS	Q 0951	87-026-467-080	0E	C-TR,HN1C01FGR	YHSSF	HS-JXM2000
X	DTS	R 0951	88-104-104-080	0E	C-RES,V 100K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0951	88-104-104-080	0E	C-RES,V 100K-1/16W J	S	HS-JXM2000
X	DTS	R 0951	88-104-104-080	0E	C-RES,V 100K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0952	88-104-223-080	0E	C-RES,V 22K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0952	88-104-223-080	0E	C-RES,V 22K-1/16W J	S	HS-JXM2000
X	DTS	R 0952	88-104-223-080	0E	C-RES,V 22K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0953	88-104-474-080	0E	C-RES,V 470K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0953	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0953	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0954	88-104-105-080	0E	C-RES,V 1M-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0954	88-104-105-080	0E	C-RES,V 1M-1/16W J	S	HS-JXM2000
X	DTS	R 0954	88-104-105-080	0E	C-RES,V 1M-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0955	88-104-104-080	0E	C-RES,V 100K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0955	88-104-104-080	0E	C-RES,V 100K-1/16W J	S	HS-JXM2000
X	DTS	R 0955	88-104-104-080	0E	C-RES,V 100K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0956	88-104-105-080	0E	C-RES,V 1M-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0956	88-104-105-080	0E	C-RES,V 1M-1/16W J	S	HS-JXM2000
X	DTS	R 0956	88-104-105-080	0E	C-RES,V 1M-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0957	88-108-000-080	0E	C-JUMPER,U	AH1SF	HS-JXM2000
X	DTS	R 0957	88-108-000-080	0E	C-JUMPER,U	S	HS-JXM2000
X	DTS	R 0957	88-108-000-080	0E	C-JUMPER,U	YHSSF	HS-JXM2000
X	DTS	R 0958	88-104-103-080	0E	C-RES,V 10K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0958	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	DTS	R 0958	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0959	88-104-474-080	0E	C-RES,V 470K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0959	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0959	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0960	88-104-103-080	0E	C-RES,V 10K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0960	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	DTS	R 0960	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0961	88-104-683-080	0E	C-RES,V 68K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0961	88-104-683-080	0E	C-RES,V 68K-1/16W J	S	HS-JXM2000
X	DTS	R 0961	88-104-683-080	0E	C-RES,V 68K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0962	88-108-102-080	0E	C-RES,U 1K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0962	88-108-102-080	0E	C-RES,U 1K-1/16W J	S	HS-JXM2000
X	DTS	R 0962	88-108-102-080	0E	C-RES,U 1K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0963	88-108-102-080	0E	C-RES,U 1K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0963	88-108-102-080	0E	C-RES,U 1K-1/16W J	S	HS-JXM2000
X	DTS	R 0963	88-108-102-080	0E	C-RES,U 1K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0964	88-108-102-080	0E	C-RES,U 1K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0964	88-108-102-080	0E	C-RES,U 1K-1/16W J	S	HS-JXM2000
X	DTS	R 0964	88-108-102-080	0E	C-RES,U 1K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0965	88-108-152-080	0E	C-RES,U 1.5K-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0965	88-108-152-080	0E	C-RES,U 1.5K-1/16W J	S	HS-JXM2000
X	DTS	R 0965	88-108-152-080	0E	C-RES,U 1.5K-1/16W J	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	DTS	R 0965	88-108-152-080	0E	C-RES,U 1.5K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0966	88-108-152-080	0E	C-RES,U 1.5K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0966	88-108-152-080	0E	C-RES,U 1.5K-1/16W J	S	HS-JXM2000
X	DTS	R 0966	88-108-152-080	0E	C-RES,U 1.5K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0967	88-108-182-080	0E	C-RES,U 1.8K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0967	88-108-182-080	0E	C-RES,U 1.8K-1/16W J	S	HS-JXM2000
X	DTS	R 0967	88-108-182-080	0E	C-RES,U 1.8K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0968	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0968	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	S	HS-JXM2000
X	DTS	R 0968	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0969	88-108-332-080	0E	C-RES,U 3.3K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0969	88-108-332-080	0E	C-RES,U 3.3K-1/16W J	S	HS-JXM2000
X	DTS	R 0969	88-108-332-080	0E	C-RES,U 3.3K-1/16W J	YHSSF	HS-JXM2000
O	DTS	R 0970	87-022-237-080	0E	C-RES,U 8.2K-1/16W F	AHLSF	HS-JXM2000
O	DTS	R 0970	87-022-237-080	0E	C-RES,U 8.2K-1/16W F	S	HS-JXM2000
O	DTS	R 0970	87-022-237-080	0E	C-RES,U 8.2K-1/16W F	YHSSF	HS-JXM2000
O	DTS	R 0971	87-022-292-080	0E	C-RES,U 330K-1/16W F	AHLSF	HS-JXM2000
O	DTS	R 0971	87-022-292-080	0E	C-RES,U 330K-1/16W F	S	HS-JXM2000
O	DTS	R 0971	87-022-292-080	0E	C-RES,U 330K-1/16W F	YHSSF	HS-JXM2000
X	DTS	R 0972	88-108-824-080	0E	C-RES,U 820K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0972	88-108-824-080	0E	C-RES,U 820K-1/16W J	S	HS-JXM2000
X	DTS	R 0972	88-108-824-080	0E	C-RES,U 820K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0973	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0973	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0973	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0974	88-104-824-080	0E	C-RES,V 820K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0974	88-104-824-080	0E	C-RES,V 820K-1/16W J	S	HS-JXM2000
X	DTS	R 0974	88-104-824-080	0E	C-RES,V 820K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0976	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0976	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0977	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0978	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0978	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0978	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0980	88-104-105-080	0E	C-RES,V 1M-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0980	88-104-105-080	0E	C-RES,V 1M-1/16W J	S	HS-JXM2000
X	DTS	R 0980	88-104-105-080	0E	C-RES,V 1M-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0981	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0981	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0981	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
O	DTS	R 0982	87-022-237-080	0E	C-RES,U 8.2K-1/16W F	AHLSF	HS-JXM2000
O	DTS	R 0982	87-022-237-080	0E	C-RES,U 8.2K-1/16W F	S	HS-JXM2000
O	DTS	R 0982	87-022-237-080	0E	C-RES,U 8.2K-1/16W F	YHSSF	HS-JXM2000
X	DTS	R 0983	88-104-103-080	0E	C-RES,V 10K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0983	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	DTS	R 0983	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0984	88-104-103-080	0E	C-RES,V 10K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0984	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	DTS	R 0984	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0985	88-104-393-080	0E	C-RES,V 39K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0985	88-104-393-080	0E	C-RES,V 39K-1/16W J	S	HS-JXM2000
X	DTS	R 0985	88-104-393-080	0E	C-RES,V 39K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0986	88-104-434-080	0E	C-RES,V 430K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0986	88-104-434-080	0E	C-RES,V 430K-1/16W J	S	HS-JXM2000
X	DTS	R 0986	88-104-434-080	0E	C-RES,V 430K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0987	88-104-103-080	0E	C-RES,V 10K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0987	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	DTS	R 0987	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0988	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0988	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0988	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0989	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0989	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0989	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0990	88-104-103-080	0E	C-RES,V 10K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0990	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	DTS	R 0990	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0991	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	DTS	R 0991	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	DTS	R 0991	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	DTS	R 0992	88-104-105-080	0E	C-RES,V 1M-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0992	88-104-105-080	0E	C-RES,V 1M-1/16W J	S	HS-JXM2000
X	DTS	R 0992	88-104-105-080	0E	C-RES,V 1M-1/16W J	YHSSF	HS-JXM2000
X	DTS	R 0995	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	AH1SF	HS-JXM2000
X	DTS	R 0995	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	S	HS-JXM2000
X	DTS	R 0995	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	YHSSF	HS-JXM2000
O	DTS	S 0951	8A-HJ2-608-010	--	SW,LEAF 7ZM-1R1	AH1SF	HS-JXM2000
O	DTS	S 0951	8A-HJ2-608-010	--	SW,LEAF 7ZM-1R1	S	HS-JXM2000
O	DTS	S 0951	8A-HJ2-608-010	--	SW,LEAF 7ZM-1R1	YHSSF	HS-JXM2000
O	DTS	S 0952	8A-HJ2-607-010	1B	SW,LEAF 7ZM-1REC	AH1SF	HS-JXM2000
O	DTS	S 0952	8A-HJ2-607-010	1B	SW,LEAF 7ZM-1REC	S	HS-JXM2000
O	DTS	S 0952	8A-HJ2-607-010	1B	SW,LEAF 7ZM-1REC	YHSSF	HS-JXM2000
O	DTS	S 0953	87-036-379-180	0E	C-SW,SL 1-1-2 SS-350-A12B-C-T	AH1SF	HS-JXM2000
O	DTS	S 0953	87-036-379-180	0E	C-SW,SL 1-1-2 SS-350-A12B-C-T	S	HS-JXM2000
O	DTS	S 0953	87-036-379-180	0E	C-SW,SL 1-1-2 SS-350-A12B-C-T	YHSSF	HS-JXM2000
O	DTS	S 0954	87-A90-665-280	0E	C-SW,TACT LS7A2M	AH1SF	HS-JXM2000
O	DTS	S 0954	87-A90-665-280	0E	C-SW,TACT LS7A2M	S	HS-JXM2000
O	DTS	S 0954	87-A90-665-280	0E	C-SW,TACT LS7A2M	YHSSF	HS-JXM2000
O	DTS	S 0955	87-A91-758-080	1C	C-SW,LVR 1-1-3 SLLB310300	AH1SF	HS-JXM2000
O	DTS	S 0955	87-A91-758-080	1C	C-SW,LVR 1-1-3 SLLB310300	S	HS-JXM2000
O	DTS	S 0955	87-A91-758-080	1C	C-SW,LVR 1-1-3 SLLB310300	YHSSF	HS-JXM2000
O	DTS	S 0956	87-A90-665-280	0E	C-SW,TACT LS7A2M	AH1SF	HS-JXM2000
O	DTS	S 0956	87-A90-665-280	0E	C-SW,TACT LS7A2M	S	HS-JXM2000
O	DTS	S 0956	87-A90-665-280	0E	C-SW,TACT LS7A2M	YHSSF	HS-JXM2000
O	DTS	S 0957	87-A90-665-280	0E	C-SW,TACT LS7A2M	AH1SF	HS-JXM2000
O	DTS	S 0957	87-A90-665-280	0E	C-SW,TACT LS7A2M	S	HS-JXM2000
O	DTS	S 0957	87-A90-665-280	0E	C-SW,TACT LS7A2M	YHSSF	HS-JXM2000
O	DTS	S 0958	87-A90-665-280	0E	C-SW,TACT LS7A2M	AH1SF	HS-JXM2000
O	DTS	S 0958	87-A90-665-280	0E	C-SW,TACT LS7A2M	S	HS-JXM2000
O	DTS	S 0958	87-A90-665-280	0E	C-SW,TACT LS7A2M	YHSSF	HS-JXM2000
O	DTS	S 0959	87-036-237-080	0E	C-SW,PUSH SPVC21005A	AH1SF	HS-JXM2000
O	DTS	S 0959	87-036-237-080	0E	C-SW,PUSH SPVC21005A	S	HS-JXM2000
O	DTS	S 0959	87-036-237-080	0E	C-SW,PUSH SPVC21005A	YHSSF	HS-JXM2000
O	DTS	S 0960	87-036-237-080	0E	C-SW,PUSH SPVC21005A	AH1SF	HS-JXM2000
O	DTS	S 0960	87-036-237-080	0E	C-SW,PUSH SPVC21005A	S	HS-JXM2000
O	DTS	S 0960	87-036-237-080	0E	C-SW,PUSH SPVC21005A	YHSSF	HS-JXM2000
O	DTS	X 0951	87-A70-187-010	1B	VIB,XTAL 75KHZ CFV206	AH1SF	HS-JXM2000
O	DTS	X 0951	87-A70-187-010	1B	VIB,XTAL 75KHZ CFV206	S	HS-JXM2000
O	DTS	X 0951	87-A70-187-010	1B	VIB,XTAL 75KHZ CFV206	YHSSF	HS-JXM2000
O	FRONT END	BPF0701	87-A90-601-010	0E	FLTR,BPF GFWB7	AH1SF	HS-JXM2000
O	FRONT END	BPF0701	87-A90-601-010	0E	FLTR,BPF GFWB7	S	HS-JXM2000
O	FRONT END	BPF0701	87-A90-601-010	0E	FLTR,BPF GFWB7	YHSSF	HS-JXM2000
O	FRONT END	C 0701	87-012-195-080	0E	C-CAP,U 100P-50 J CH	AH1SF	HS-JXM2000
O	FRONT END	C 0701	87-012-195-080	0E	C-CAP,U 100P-50 J CH	S	HS-JXM2000
O	FRONT END	C 0701	87-012-195-080	0E	C-CAP,U 100P-50 J CH	YHSSF	HS-JXM2000
O	FRONT END	C 0702	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	FRONT END	C 0702	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C 0702	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C 0703	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	FRONT END	C 0703	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C 0703	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C 0704	87-012-268-080	0E	C-CAP,U 330P-50 K B	S	HS-JXM2000
O	FRONT END	C 0704	87-012-273-080	0E	C-CAP,U 820P-50 K B	AH1SF	HS-JXM2000
O	FRONT END	C 0704	87-012-273-080	0E	C-CAP,U 820P-50 K B	YHSSF	HS-JXM2000
O	FRONT END	C 0705	87-012-191-080	0E	C-CAP,U 68P-50 J CH	AH1SF	HS-JXM2000
O	FRONT END	C 0705	87-012-191-080	0E	C-CAP,U 68P-50 J CH	S	HS-JXM2000
O	FRONT END	C 0705	87-012-191-080	0E	C-CAP,U 68P-50 J CH	YHSSF	HS-JXM2000
O	FRONT END	C 0706	87-012-268-080	0E	C-CAP,U 330P-50 K B	AH1SF	HS-JXM2000
O	FRONT END	C 0706	87-012-268-080	0E	C-CAP,U 330P-50 K B	YHSSF	HS-JXM2000
O	FRONT END	C 0706	87-012-278-080	0E	C-CAP,U 2200P-50 K B	S	HS-JXM2000
O	FRONT END	C 0707	87-012-164-080	0E	C-CAP,U 2P-50 C CH	S	HS-JXM2000
O	FRONT END	C 0707	87-012-165-080	0E	C-CAP,U 3P-50 C CH	AH1SF	HS-JXM2000
O	FRONT END	C 0707	87-012-165-080	0E	C-CAP,U 3P-50 C CH	YHSSF	HS-JXM2000
O	FRONT END	C 0708	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	FRONT END	C 0708	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C 0708	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C 0710	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	FRONT END	C 0710	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	S	HS-JXM2000
O	FRONT END	C 0710	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	FRONT END	C 0711	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME	
O	FRONT END	C	0711	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C	0711	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C	0712	87-012-163-080	0E	C-CAP,U 1.5P-50 C CH	S	HS-JXM2000
O	FRONT END	C	0712	87-012-165-080	0E	C-CAP,U 3P-50 C CH	AH1SF	HS-JXM2000
O	FRONT END	C	0712	87-012-165-080	0E	C-CAP,U 3P-50 C CH	YHSSF	HS-JXM2000
O	FRONT END	C	0713	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	FRONT END	C	0713	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C	0713	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C	0714	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	FRONT END	C	0714	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C	0714	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C	0715	87-012-286-080	0E	C-CAP,U 0.01-25 K B	AH1SF	HS-JXM2000
O	FRONT END	C	0715	87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000
O	FRONT END	C	0715	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YHSSF	HS-JXM2000
O	FRONT END	C	0716	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	FRONT END	C	0716	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C	0716	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C	0717	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	FRONT END	C	0717	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	FRONT END	C	0717	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	FRONT END	C	0720	87-012-199-080	0E	C-CAP,U 220P-50 J CH	AH1SF	HS-JXM2000
O	FRONT END	C	0720	87-012-199-080	0E	C-CAP,U 220P-50 J CH	S	HS-JXM2000
O	FRONT END	C	0720	87-012-199-080	0E	C-CAP,U 220P-50 J CH	YHSSF	HS-JXM2000
O	FRONT END	C	0721	87-012-274-080	0E	C-CAP,U 1000P-50 K B	AH1SF	HS-JXM2000
O	FRONT END	C	0721	87-012-274-080	0E	C-CAP,U 1000P-50 K B	YHSSF	HS-JXM2000
O	FRONT END	C	0723	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	FRONT END	C	0723	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	FRONT END	D	0701	87-A40-655-080	0E	C-VARI-CAP, HVU200A	AH1SF	HS-JXM2000
O	FRONT END	D	0701	87-A40-655-080	0E	C-VARI-CAP, HVU200A	S	HS-JXM2000
O	FRONT END	D	0701	87-A40-655-080	0E	C-VARI-CAP, HVU200A	YHSSF	HS-JXM2000
O	FRONT END	D	0702	87-A40-655-080	0E	C-VARI-CAP, HVU200A	AH1SF	HS-JXM2000
O	FRONT END	D	0702	87-A40-655-080	0E	C-VARI-CAP, HVU200A	S	HS-JXM2000
O	FRONT END	D	0702	87-A40-655-080	0E	C-VARI-CAP, HVU200A	YHSSF	HS-JXM2000
S	FRONT END	IC	0701	87-001-815-040	1C	C-IC, TA7371AF	AH1SF	HS-JXM2000
S	FRONT END	IC	0701	87-001-815-040	1C	C-IC, TA7371AF	S	HS-JXM2000
S	FRONT END	IC	0701	87-001-815-040	1C	C-IC, TA7371AF	YHSSF	HS-JXM2000
O	FRONT END	L	0701	87-A50-511-080	0E	C-COIL, 82NH G LQN21A	AH1SF	HS-JXM2000
O	FRONT END	L	0701	87-A50-511-080	0E	C-COIL, 82NH G LQN21A	S	HS-JXM2000
O	FRONT END	L	0701	87-A50-511-080	0E	C-COIL, 82NH G LQN21A	YHSSF	HS-JXM2000
O	FRONT END	L	0702	87-A50-583-080	0E	C-COIL, S 2.2UH K FCI2012H	AH1SF	HS-JXM2000
O	FRONT END	L	0702	87-A50-583-080	0E	C-COIL, S 2.2UH K FCI2012H	S	HS-JXM2000
O	FRONT END	L	0702	87-A50-583-080	0E	C-COIL, S 2.2UH K FCI2012H	YHSSF	HS-JXM2000
O	FRONT END	L	0703	87-A50-510-080	0E	C-COIL, 68NH G LQN21A	AH1SF	HS-JXM2000
O	FRONT END	L	0703	87-A50-510-080	0E	C-COIL, 68NH G LQN21A	YHSSF	HS-JXM2000
O	FRONT END	L	0703	87-A50-513-080	0E	C-COIL, 120NH G LQN21A	S	HS-JXM2000
S	FRONT END	Q	0701	87-A30-503-040	0E	C-TR, 2SC4649P	AH1SF	HS-JXM2000
S	FRONT END	Q	0701	87-A30-503-040	0E	C-TR, 2SC4649P	S	HS-JXM2000
S	FRONT END	Q	0701	87-A30-503-040	0E	C-TR, 2SC4649P	YHSSF	HS-JXM2000
S	FRONT END	Q	0702	87-A30-503-040	0E	C-TR, 2SC4649P	AH1SF	HS-JXM2000
S	FRONT END	Q	0702	87-A30-503-040	0E	C-TR, 2SC4649P	S	HS-JXM2000
S	FRONT END	Q	0702	87-A30-503-040	0E	C-TR, 2SC4649P	YHSSF	HS-JXM2000
S	FRONT END	Q	0703	87-A30-502-040	0E	C-TR, 2SA1745-7	AH1SF	HS-JXM2000
S	FRONT END	Q	0703	87-A30-502-040	0E	C-TR, 2SA1745-7	S	HS-JXM2000
S	FRONT END	Q	0703	87-A30-502-040	0E	C-TR, 2SA1745-7	YHSSF	HS-JXM2000
S	FRONT END	Q	0704	89-115-865-080	0E	C-TR, 2SA1586G	AH1SF	HS-JXM2000
S	FRONT END	Q	0704	89-115-865-080	0E	C-TR, 2SA1586G	S	HS-JXM2000
S	FRONT END	Q	0704	89-115-865-080	0E	C-TR, 2SA1586G	YHSSF	HS-JXM2000
X	FRONT END	R	0701	88-108-153-080	0E	C-RES, U 15K-1/16W J	AH1SF	HS-JXM2000
X	FRONT END	R	0701	88-108-153-080	0E	C-RES, U 15K-1/16W J	S	HS-JXM2000
X	FRONT END	R	0701	88-108-153-080	0E	C-RES, U 15K-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R	0702	88-108-100-080	0E	C-RES, U 10-1/16W J	AH1SF	HS-JXM2000
X	FRONT END	R	0702	88-108-100-080	0E	C-RES, U 10-1/16W J	S	HS-JXM2000
X	FRONT END	R	0702	88-108-100-080	0E	C-RES, U 10-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R	0703	88-108-473-080	0E	C-RES, U 47K-1/16W J	AH1SF	HS-JXM2000
X	FRONT END	R	0703	88-108-473-080	0E	C-RES, U 47K-1/16W J	S	HS-JXM2000
X	FRONT END	R	0703	88-108-473-080	0E	C-RES, U 47K-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R	0704	88-108-473-080	0E	C-RES, U 47K-1/16W J	AH1SF	HS-JXM2000
X	FRONT END	R	0704	88-108-473-080	0E	C-RES, U 47K-1/16W J	S	HS-JXM2000
X	FRONT END	R	0704	88-108-473-080	0E	C-RES, U 47K-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R	0705	88-108-479-080	0E	C-RES, U 4.7-1/16W J	AH1SF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	FRONT END	R 0705	88-108-479-080	0E	C-RES,U 4.7-1/16W J	S	HS-JXM2000
X	FRONT END	R 0705	88-108-479-080	0E	C-RES,U 4.7-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0706	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0706	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	S	HS-JXM2000
X	FRONT END	R 0706	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0707	88-104-473-080	0E	C-RES,V 47K-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0707	88-104-473-080	0E	C-RES,V 47K-1/16W J	S	HS-JXM2000
X	FRONT END	R 0707	88-104-473-080	0E	C-RES,V 47K-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0708	88-108-471-080	0E	C-RES,U 470-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0708	88-108-471-080	0E	C-RES,U 470-1/16W J	S	HS-JXM2000
X	FRONT END	R 0708	88-108-471-080	0E	C-RES,U 470-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0709	88-104-479-080	0E	C-RES,V 4.7-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0709	88-104-479-080	0E	C-RES,V 4.7-1/16W J	S	HS-JXM2000
X	FRONT END	R 0709	88-104-479-080	0E	C-RES,V 4.7-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0711	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0711	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	S	HS-JXM2000
X	FRONT END	R 0711	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0712	88-104-102-080	0E	C-RES,V 1K-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0712	88-104-102-080	0E	C-RES,V 1K-1/16W J	S	HS-JXM2000
X	FRONT END	R 0712	88-104-102-080	0E	C-RES,V 1K-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0713	88-108-101-080	0E	C-RES,U 100-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0713	88-108-101-080	0E	C-RES,U 100-1/16W J	S	HS-JXM2000
X	FRONT END	R 0713	88-108-101-080	0E	C-RES,U 100-1/16W J	YHSSF	HS-JXM2000
X	FRONT END	R 0714	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	AHLSF	HS-JXM2000
X	FRONT END	R 0714	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	S	HS-JXM2000
X	FRONT END	R 0714	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	YHSSF	HS-JXM2000
O	FRONT END	TC 0701	87-A91-762-080	1A	C-TRIMMER,10P TZVY2Z100A	AHLSF	HS-JXM2000
O	FRONT END	TC 0701	87-A91-762-080	1A	C-TRIMMER,10P TZVY2Z100A	S	HS-JXM2000
O	FRONT END	TC 0701	87-A91-762-080	1A	C-TRIMMER,10P TZVY2Z100A	YHSSF	HS-JXM2000
O	FRONT END	TC 0702	87-A91-761-080	1A	C-TRIMMER,25P TZVY2R250A	AHLSF	HS-JXM2000
O	FRONT END	TC 0702	87-A91-761-080	1A	C-TRIMMER,25P TZVY2R250A	S	HS-JXM2000
O	FRONT END	TC 0702	87-A91-761-080	1A	C-TRIMMER,25P TZVY2R250A	YHSSF	HS-JXM2000
O	GOV	C 0401	87-012-286-080	0E	C-CAP,U 0.01-25 K B	AHLSF	HS-JXM2000
O	GOV	C 0401	87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000
O	GOV	C 0401	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YHSSF	HS-JXM2000
O	GOV	C 0402	87-A10-260-080	0E	C-CAP,U 0.1-16 K B	AHLSF	HS-JXM2000
O	GOV	C 0402	87-A10-260-080	0E	C-CAP,U 0.1-16 K B	S	HS-JXM2000
O	GOV	C 0402	87-A10-260-080	0E	C-CAP,U 0.1-16 K B	YHSSF	HS-JXM2000
O	GOV	C 0403	87-A11-796-080	0E	C-CAP,S 4.7-10 Z F	AHLSF	HS-JXM2000
O	GOV	C 0403	87-A11-796-080	0E	C-CAP,S 4.7-10 Z F	S	HS-JXM2000
O	GOV	C 0403	87-A11-796-080	0E	C-CAP,S 4.7-10 Z F	YHSSF	HS-JXM2000
O	GOV	C 0404	87-010-831-080	0E	C-CAP,U 0.1-16 Z F	AHLSF	HS-JXM2000
O	GOV	C 0404	87-010-831-080	0E	C-CAP,U 0.1-16 Z F	S	HS-JXM2000
O	GOV	C 0404	87-010-831-080	0E	C-CAP,U 0.1-16 Z F	YHSSF	HS-JXM2000
O	GOV	C 0405	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	AHLSF	HS-JXM2000
O	GOV	C 0405	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	S	HS-JXM2000
O	GOV	C 0405	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	GOV	C 0406	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	AHLSF	HS-JXM2000
O	GOV	C 0406	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	S	HS-JXM2000
O	GOV	C 0406	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	GOV	C 0407	87-012-286-080	0E	C-CAP,U 0.01-25 K B	AHLSF	HS-JXM2000
O	GOV	C 0407	87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000
O	GOV	C 0407	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YHSSF	HS-JXM2000
O	GOV	C 0408	87-012-286-080	0E	C-CAP,U 0.01-25 K B	AHLSF	HS-JXM2000
O	GOV	C 0408	87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000
O	GOV	C 0408	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YHSSF	HS-JXM2000
O	GOV	C 0408	87-012-286-080	0E	C-CAP,U 0.01-25 K B	AHLSF	HS-JXM2000
O	GOV	C 0409	87-012-286-080	0E	C-CAP,U 0.01-25 K B	AHLSF	HS-JXM2000
O	GOV	C 0409	87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000
O	GOV	C 0409	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YHSSF	HS-JXM2000
S	GOV	IC 0401	87-A20-961-040	1E	C-IC,MM1279XV	AHLSF	HS-JXM2000
S	GOV	IC 0401	87-A20-961-040	1E	C-IC,MM1279XV	S	HS-JXM2000
S	GOV	IC 0401	87-A20-961-040	1E	C-IC,MM1279XV	YHSSF	HS-JXM2000
S	GOV	Q 0401	87-A30-085-040	0E	C-TR,CSA1362GR	AHLSF	HS-JXM2000
S	GOV	Q 0401	87-A30-085-040	0E	C-TR,CSA1362GR	S	HS-JXM2000
S	GOV	Q 0401	87-A30-085-040	0E	C-TR,CSA1362GR	YHSSF	HS-JXM2000
S	GOV	Q 0402	87-A30-085-040	0E	C-TR,CSA1362GR	AHLSF	HS-JXM2000
S	GOV	Q 0402	87-A30-085-040	0E	C-TR,CSA1362GR	S	HS-JXM2000
S	GOV	Q 0402	87-A30-085-040	0E	C-TR,CSA1362GR	YHSSF	HS-JXM2000
S	GOV	Q 0403	87-A30-085-040	0E	C-TR,CSA1362GR	AHLSF	HS-JXM2000
S	GOV	Q 0403	87-A30-085-040	0E	C-TR,CSA1362GR	S	HS-JXM2000
S	GOV	Q 0403	87-A30-085-040	0E	C-TR,CSA1362GR	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME	
S	GOV	Q	0403	87-A30-085-040	0E	C-TR,CSA1362GR	YHSSF	HS-JXM2000
S	GOV	Q	0404	89-342-132-080	0E	C-TR,2SC4213B	AHLSF	HS-JXM2000
S	GOV	Q	0404	89-342-132-080	0E	C-TR,2SC4213B	S	HS-JXM2000
S	GOV	Q	0404	89-342-132-080	0E	C-TR,2SC4213B	YHSSF	HS-JXM2000
S	GOV	Q	0405	89-342-132-080	0E	C-TR,2SC4213B	AHLSF	HS-JXM2000
S	GOV	Q	0405	89-342-132-080	0E	C-TR,2SC4213B	S	HS-JXM2000
S	GOV	Q	0405	89-342-132-080	0E	C-TR,2SC4213B	YHSSF	HS-JXM2000
X	GOV	R	0401	88-108-154-080	0E	C-RES,U 150K-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0401	88-108-154-080	0E	C-RES,U 150K-1/16W J	S	HS-JXM2000
X	GOV	R	0401	88-108-154-080	0E	C-RES,U 150K-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0402	88-104-682-080	0E	C-RES,V 6.8K-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0402	88-104-682-080	0E	C-RES,V 6.8K-1/16W J	S	HS-JXM2000
X	GOV	R	0402	88-104-682-080	0E	C-RES,V 6.8K-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0403	88-108-151-080	0E	C-RES,U 150-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0403	88-108-151-080	0E	C-RES,U 150-1/16W J	S	HS-JXM2000
X	GOV	R	0403	88-108-151-080	0E	C-RES,U 150-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0404	88-108-151-080	0E	C-RES,U 150-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0404	88-108-151-080	0E	C-RES,U 150-1/16W J	S	HS-JXM2000
X	GOV	R	0404	88-108-151-080	0E	C-RES,U 150-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0405	88-108-151-080	0E	C-RES,U 150-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0405	88-108-151-080	0E	C-RES,U 150-1/16W J	S	HS-JXM2000
X	GOV	R	0405	88-108-151-080	0E	C-RES,U 150-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0406	88-108-105-080	0E	C-RES,U 1M-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0406	88-108-105-080	0E	C-RES,U 1M-1/16W J	S	HS-JXM2000
X	GOV	R	0406	88-108-105-080	0E	C-RES,U 1M-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0407	88-108-123-080	0E	C-RES,U 12K-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0407	88-108-123-080	0E	C-RES,U 12K-1/16W J	S	HS-JXM2000
X	GOV	R	0407	88-108-123-080	0E	C-RES,U 12K-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0408	88-108-560-080	0E	C-RES,U 56-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0408	88-108-560-080	0E	C-RES,U 56-1/16W J	S	HS-JXM2000
X	GOV	R	0408	88-108-560-080	0E	C-RES,U 56-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0410	88-108-122-080	0E	C-RES,U 1.2K-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0410	88-108-122-080	0E	C-RES,U 1.2K-1/16W J	S	HS-JXM2000
X	GOV	R	0410	88-108-122-080	0E	C-RES,U 1.2K-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0411	88-108-822-080	0E	C-RES,U 8.2K-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0411	88-108-822-080	0E	C-RES,U 8.2K-1/16W J	S	HS-JXM2000
X	GOV	R	0411	88-108-822-080	0E	C-RES,U 8.2K-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0412	88-108-101-080	0E	C-RES,U 100-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0412	88-108-101-080	0E	C-RES,U 100-1/16W J	S	HS-JXM2000
X	GOV	R	0412	88-108-101-080	0E	C-RES,U 100-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0413	88-108-154-080	0E	C-RES,U 150K-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0413	88-108-154-080	0E	C-RES,U 150K-1/16W J	S	HS-JXM2000
X	GOV	R	0413	88-108-154-080	0E	C-RES,U 150K-1/16W J	YHSSF	HS-JXM2000
X	GOV	R	0414	88-108-154-080	0E	C-RES,U 150K-1/16W J	AHLSF	HS-JXM2000
X	GOV	R	0414	88-108-154-080	0E	C-RES,U 150K-1/16W J	S	HS-JXM2000
X	GOV	R	0414	88-108-154-080	0E	C-RES,U 150K-1/16W J	YHSSF	HS-JXM2000
O	GOV	R	0415	87-A00-695-080	0E	M-RES,M/F 3.9K-1/8W J 3000PPM	AHLSF	HS-JXM2000
O	GOV	R	0415	87-A00-695-080	0E	M-RES,M/F 3.9K-1/8W J 3000PPM	S	HS-JXM2000
O	GOV	R	0415	87-A00-695-080	0E	M-RES,M/F 3.9K-1/8W J 3000PPM	YHSSF	HS-JXM2000
O	GOV	SFR0401	87-A91-465-040	0E	C-SFR,K 6.8K H RH03AEC	AHLSF	HS-JXM2000	
O	GOV	SFR0401	87-A91-465-040	0E	C-SFR,K 6.8K H RH03AEC	S	HS-JXM2000	
O	GOV	SFR0401	87-A91-465-040	0E	C-SFR,K 6.8K H RH03AEC	YHSSF	HS-JXM2000	
O	IF MPX	C	0801	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AHLSF	HS-JXM2000
O	IF MPX	C	0801	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	IF MPX	C	0801	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0802	87-A12-348-080	0E	C-CAP,U 560P-25 J CH	AHLSF	HS-JXM2000
O	IF MPX	C	0802	87-A12-348-080	0E	C-CAP,U 560P-25 J CH	S	HS-JXM2000
O	IF MPX	C	0802	87-A12-348-080	0E	C-CAP,U 560P-25 J CH	YHSSF	HS-JXM2000
O	IF MPX	C	0804	87-A10-531-080	0E	C-CAP,V 10P-50 D CH	AHLSF	HS-JXM2000
O	IF MPX	C	0804	87-A10-531-080	0E	C-CAP,V 10P-50 D CH	S	HS-JXM2000
O	IF MPX	C	0804	87-A10-531-080	0E	C-CAP,V 10P-50 D CH	YHSSF	HS-JXM2000
O	IF MPX	C	0805	87-012-245-080	0E	C-CAP,U 15P-50 J UJ	AHLSF	HS-JXM2000
O	IF MPX	C	0805	87-012-245-080	0E	C-CAP,U 15P-50 J UJ	S	HS-JXM2000
O	IF MPX	C	0805	87-012-245-080	0E	C-CAP,U 15P-50 J UJ	YHSSF	HS-JXM2000
O	IF MPX	C	0806	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	AHLSF	HS-JXM2000
O	IF MPX	C	0806	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	S	HS-JXM2000
O	IF MPX	C	0806	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0807	87-A10-553-080	0E	C-CAP,V 820P-50 K B	AHLSF	HS-JXM2000
O	IF MPX	C	0807	87-A10-553-080	0E	C-CAP,V 820P-50 K B	S	HS-JXM2000
O	IF MPX	C	0807	87-A10-553-080	0E	C-CAP,V 820P-50 K B	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	IF MPX	C	0808 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0808 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	IF MPX	C	0808 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0809 87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	IF MPX	C	0809 87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	S	HS-JXM2000
O	IF MPX	C	0809 87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	IF MPX	C	0810 87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	IF MPX	C	0810 87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	IF MPX	C	0810 87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0811 87-010-746-080	1A	C-CAP,TN 10-4 M 125	AH1SF	HS-JXM2000
O	IF MPX	C	0811 87-010-746-080	1A	C-CAP,TN 10-4 M 125	S	HS-JXM2000
O	IF MPX	C	0811 87-010-746-080	1A	C-CAP,TN 10-4 M 125	YHSSF	HS-JXM2000
O	IF MPX	C	0812 87-A10-554-080	0E	C-CAP,V 1000P-50 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0812 87-A10-554-080	0E	C-CAP,V 1000P-50 K B	S	HS-JXM2000
O	IF MPX	C	0812 87-A10-554-080	0E	C-CAP,V 1000P-50 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0813 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0813 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	IF MPX	C	0813 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0816 87-A10-560-080	0E	C-CAP,V 8200P-25 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0816 87-A10-560-080	0E	C-CAP,V 8200P-25 K B	S	HS-JXM2000
O	IF MPX	C	0816 87-A10-560-080	0E	C-CAP,V 8200P-25 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0817 87-A10-560-080	0E	C-CAP,V 8200P-25 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0817 87-A10-560-080	0E	C-CAP,V 8200P-25 K B	S	HS-JXM2000
O	IF MPX	C	0817 87-A10-560-080	0E	C-CAP,V 8200P-25 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0819 87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	IF MPX	C	0819 87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	IF MPX	C	0819 87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0820 87-A10-766-080	0E	C-CAP,V 0.047-10 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0820 87-A10-766-080	0E	C-CAP,V 0.047-10 K B	S	HS-JXM2000
O	IF MPX	C	0820 87-A10-766-080	0E	C-CAP,V 0.047-10 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0821 87-A10-915-080	0E	C-CAP,U 1000P-25 J CH	AH1SF	HS-JXM2000
O	IF MPX	C	0821 87-A10-915-080	0E	C-CAP,U 1000P-25 J CH	S	HS-JXM2000
O	IF MPX	C	0821 87-A10-915-080	0E	C-CAP,U 1000P-25 J CH	YHSSF	HS-JXM2000
O	IF MPX	C	0822 87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	IF MPX	C	0822 87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	IF MPX	C	0822 87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0823 87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AH1SF	HS-JXM2000
O	IF MPX	C	0823 87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	IF MPX	C	0823 87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0824 87-A10-025-080	0E	C-CAP,U 0.22-16 Z F	AH1SF	HS-JXM2000
O	IF MPX	C	0824 87-A10-025-080	0E	C-CAP,U 0.22-16 Z F	S	HS-JXM2000
O	IF MPX	C	0824 87-A10-025-080	0E	C-CAP,U 0.22-16 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0825 87-A10-554-080	0E	C-CAP,V 1000P-50 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0825 87-A10-554-080	0E	C-CAP,V 1000P-50 K B	S	HS-JXM2000
O	IF MPX	C	0825 87-A10-554-080	0E	C-CAP,V 1000P-50 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0826 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0826 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	IF MPX	C	0826 87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0829 87-A10-558-080	0E	C-CAP,V 4700P-25 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0829 87-A10-558-080	0E	C-CAP,V 4700P-25 K B	S	HS-JXM2000
O	IF MPX	C	0829 87-A10-558-080	0E	C-CAP,V 4700P-25 K B	YHSSF	HS-JXM2000
O	IF MPX	C	0831 87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	IF MPX	C	0831 87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	IF MPX	C	0831 87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0831 87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	IF MPX	C	0832 87-012-286-080	0E	C-CAP,U 0.01-25 K B	AH1SF	HS-JXM2000
O	IF MPX	C	0832 87-012-286-080	0E	C-CAP,U 0.01-25 K B	S	HS-JXM2000
O	IF MPX	C	0832 87-012-286-080	0E	C-CAP,U 0.01-25 K B	YHSSF	HS-JXM2000
O	IF MPX	CF	0801 87-A91-321-080	1B	C-FLTR,SFECV10.7 MA-5-A-TC	AH1SF	HS-JXM2000
O	IF MPX	CF	0801 87-A91-321-080	1B	C-FLTR,SFECV10.7 MA-5-A-TC	S	HS-JXM2000
O	IF MPX	CF	0801 87-A91-321-080	1B	C-FLTR,SFECV10.7 MA-5-A-TC	YHSSF	HS-JXM2000
O	IF MPX	CF	0801 87-A91-321-080	1B	C-FLTR,SFECV10.7 MA-5-A-TC	YHSSF	HS-JXM2000
O	IF MPX	CF	0802 87-A91-321-080	1B	C-FLTR,SFECV10.7 MA-5-A-TC	AH1SF	HS-JXM2000
O	IF MPX	CF	0802 87-A91-321-080	1B	C-FLTR,SFECV10.7 MA-5-A-TC	S	HS-JXM2000
O	IF MPX	CF	0802 87-A91-321-080	1B	C-FLTR,SFECV10.7 MA-5-A-TC	YHSSF	HS-JXM2000
O	IF MPX	CF	0803 87-A90-456-080	1B	C-FLTR,PFWCC 450J3	AH1SF	HS-JXM2000
O	IF MPX	CF	0803 87-A90-456-080	1B	C-FLTR,PFWCC 450J3	S	HS-JXM2000
O	IF MPX	CF	0803 87-A90-456-080	1B	C-FLTR,PFWCC 450J3	YHSSF	HS-JXM2000
O	IF MPX	D	0801 87-A40-799-040	1B	C-VARI-CAP,KV1610S	AH1SF	HS-JXM2000
O	IF MPX	D	0801 87-A40-799-040	1B	C-VARI-CAP,KV1610S	S	HS-JXM2000
O	IF MPX	D	0801 87-A40-799-040	1B	C-VARI-CAP,KV1610S	YHSSF	HS-JXM2000
S	IF MPX	IC	0801 87-A20-076-040	1H	C-IC,TA2022AFN	AH1SF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	IF MPX	IC 0801	87-A20-076-040	1H	C-IC,TA2022AFN	S	HS-JXM2000
S	IF MPX	IC 0801	87-A20-076-040	1H	C-IC,TA2022AFN	YHSSF	HS-JXM2000
O	IF MPX	IFT0801	87-005-788-080	1B	C-IFT AM 5M 5CLD	AHLSF	HS-JXM2000
O	IF MPX	IFT0801	87-005-788-080	1B	C-IFT AM 5M 5CLD	S	HS-JXM2000
O	IF MPX	IFT0801	87-005-788-080	1B	C-IFT AM 5M 5CLD	YHSSF	HS-JXM2000
X	IF MPX	JR 0821	88-104-000-080	0E	C-JUMPER,V	AHLSF	HS-JXM2000
X	IF MPX	JR 0821	88-104-000-080	0E	C-JUMPER,V	S	HS-JXM2000
X	IF MPX	JR 0821	88-104-000-080	0E	C-JUMPER,V	YHSSF	HS-JXM2000
X	IF MPX	JR 0822	88-104-000-080	0E	C-JUMPER,V	AHLSF	HS-JXM2000
X	IF MPX	JR 0822	88-104-000-080	0E	C-JUMPER,V	S	HS-JXM2000
X	IF MPX	JR 0822	88-104-000-080	0E	C-JUMPER,V	YHSSF	HS-JXM2000
O	IF MPX	L 0801	88-HR4-614-010	1A	BAR-ANT,MW	AHLSF	HS-JXM2000
O	IF MPX	L 0801	88-HR4-614-010	1A	BAR-ANT,MW	S	HS-JXM2000
O	IF MPX	L 0801	88-HR4-614-010	1A	BAR-ANT,MW	YHSSF	HS-JXM2000
O	IF MPX	L 0802	87-A50-363-080	0E	C-COIL, 100UH J NLV25T	AHLSF	HS-JXM2000
O	IF MPX	L 0802	87-A50-363-080	0E	C-COIL, 100UH J NLV25T	S	HS-JXM2000
O	IF MPX	L 0802	87-A50-363-080	0E	C-COIL, 100UH J NLV25T	YHSSF	HS-JXM2000
S	IF MPX	Q 0801	87-A30-503-040	0E	C-TR,2SC4649P	AHLSF	HS-JXM2000
S	IF MPX	Q 0801	87-A30-503-040	0E	C-TR,2SC4649P	S	HS-JXM2000
S	IF MPX	Q 0801	87-A30-503-040	0E	C-TR,2SC4649P	YHSSF	HS-JXM2000
S	IF MPX	Q 0803	87-A30-503-040	0E	C-TR,2SC4649P	AHLSF	HS-JXM2000
S	IF MPX	Q 0803	87-A30-503-040	0E	C-TR,2SC4649P	S	HS-JXM2000
S	IF MPX	Q 0803	87-A30-503-040	0E	C-TR,2SC4649P	YHSSF	HS-JXM2000
S	IF MPX	Q 0804	87-A30-503-040	0E	C-TR,2SC4649P	AHLSF	HS-JXM2000
S	IF MPX	Q 0804	87-A30-503-040	0E	C-TR,2SC4649P	S	HS-JXM2000
S	IF MPX	Q 0804	87-A30-503-040	0E	C-TR,2SC4649P	YHSSF	HS-JXM2000
S	IF MPX	Q 0805	87-A30-503-040	0E	C-TR,2SC4649P	AHLSF	HS-JXM2000
S	IF MPX	Q 0805	87-A30-503-040	0E	C-TR,2SC4649P	S	HS-JXM2000
S	IF MPX	Q 0805	87-A30-503-040	0E	C-TR,2SC4649P	YHSSF	HS-JXM2000
S	IF MPX	Q 0806	87-026-535-080	0E	C-TR,RN4907	AHLSF	HS-JXM2000
S	IF MPX	Q 0806	87-026-535-080	0E	C-TR,RN4907	S	HS-JXM2000
S	IF MPX	Q 0806	87-026-535-080	0E	C-TR,RN4907	YHSSF	HS-JXM2000
S	IF MPX	Q 0807	87-A30-504-040	0E	C-TR,DTC144TE	AHLSF	HS-JXM2000
S	IF MPX	Q 0807	87-A30-504-040	0E	C-TR,DTC144TE	S	HS-JXM2000
S	IF MPX	Q 0807	87-A30-504-040	0E	C-TR,DTC144TE	YHSSF	HS-JXM2000
S	IF MPX	Q 0808	87-A30-504-040	0E	C-TR,DTC144TE	AHLSF	HS-JXM2000
S	IF MPX	Q 0808	87-A30-504-040	0E	C-TR,DTC144TE	S	HS-JXM2000
S	IF MPX	Q 0808	87-A30-504-040	0E	C-TR,DTC144TE	YHSSF	HS-JXM2000
S	IF MPX	Q 0809	87-A30-181-040	0E	C-TR,DTA114TEA	AHLSF	HS-JXM2000
S	IF MPX	Q 0809	87-A30-181-040	0E	C-TR,DTA114TEA	S	HS-JXM2000
S	IF MPX	Q 0809	87-A30-181-040	0E	C-TR,DTA114TEA	YHSSF	HS-JXM2000
X	IF MPX	R 0801	88-104-102-080	0E	C-RES,V 1K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0801	88-104-102-080	0E	C-RES,V 1K-1/16W J	S	HS-JXM2000
X	IF MPX	R 0801	88-104-102-080	0E	C-RES,V 1K-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0802	88-104-104-080	0E	C-RES,V 100K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0802	88-104-104-080	0E	C-RES,V 100K-1/16W J	S	HS-JXM2000
X	IF MPX	R 0802	88-104-104-080	0E	C-RES,V 100K-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0803	88-104-474-080	0E	C-RES,V 470K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0803	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	IF MPX	R 0803	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0804	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0804	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	S	HS-JXM2000
X	IF MPX	R 0804	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0805	88-104-821-080	0E	C-RES,V 820-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0805	88-104-821-080	0E	C-RES,V 820-1/16W J	S	HS-JXM2000
X	IF MPX	R 0805	88-104-821-080	0E	C-RES,V 820-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0806	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0806	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	IF MPX	R 0806	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0807	88-104-683-080	0E	C-RES,V 68K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0807	88-104-683-080	0E	C-RES,V 68K-1/16W J	S	HS-JXM2000
X	IF MPX	R 0807	88-104-683-080	0E	C-RES,V 68K-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0808	88-104-471-080	0E	C-RES,V 470-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0808	88-104-471-080	0E	C-RES,V 470-1/16W J	S	HS-JXM2000
X	IF MPX	R 0808	88-104-471-080	0E	C-RES,V 470-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0809	88-104-183-080	0E	C-RES,V 18K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0809	88-104-183-080	0E	C-RES,V 18K-1/16W J	YHSSF	HS-JXM2000
X	IF MPX	R 0809	88-104-393-080	0E	C-RES,V 39K-1/16W J	S	HS-JXM2000
X	IF MPX	R 0810	88-104-104-080	0E	C-RES,V 100K-1/16W J	AHLSF	HS-JXM2000
X	IF MPX	R 0810	88-104-104-080	0E	C-RES,V 100K-1/16W J	S	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X IF MPX		R 0810	88-104-104-080	0E	C-RES,V 100K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0811	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0811	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	S	HS-JXM2000
X IF MPX		R 0811	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0814	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0814	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	S	HS-JXM2000
X IF MPX		R 0814	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0815	88-104-682-080	0E	C-RES,V 6.8K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0815	88-104-682-080	0E	C-RES,V 6.8K-1/16W J	S	HS-JXM2000
X IF MPX		R 0815	88-104-682-080	0E	C-RES,V 6.8K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0816	88-104-223-080	0E	C-RES,V 22K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0816	88-104-223-080	0E	C-RES,V 22K-1/16W J	S	HS-JXM2000
X IF MPX		R 0816	88-104-223-080	0E	C-RES,V 22K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0817	88-104-273-080	0E	C-RES,V 27K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0817	88-104-273-080	0E	C-RES,V 27K-1/16W J	S	HS-JXM2000
X IF MPX		R 0817	88-104-273-080	0E	C-RES,V 27K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0818	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0818	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	S	HS-JXM2000
X IF MPX		R 0818	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0819	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0819	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	S	HS-JXM2000
X IF MPX		R 0819	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0820	88-104-224-080	0E	C-RES,V 220K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0820	88-104-224-080	0E	C-RES,V 220K-1/16W J	S	HS-JXM2000
X IF MPX		R 0820	88-104-224-080	0E	C-RES,V 220K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0825	88-104-100-080	0E	C-RES,V 10-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0825	88-104-100-080	0E	C-RES,V 10-1/16W J	S	HS-JXM2000
X IF MPX		R 0825	88-104-100-080	0E	C-RES,V 10-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0826	88-104-331-080	0E	C-RES,V 330-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0826	88-104-331-080	0E	C-RES,V 330-1/16W J	S	HS-JXM2000
X IF MPX		R 0826	88-104-331-080	0E	C-RES,V 330-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0827	88-108-473-080	0E	C-RES,U 47K-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0827	88-108-473-080	0E	C-RES,U 47K-1/16W J	S	HS-JXM2000
X IF MPX		R 0827	88-108-473-080	0E	C-RES,U 47K-1/16W J	YHSSF	HS-JXM2000
X IF MPX		R 0828	88-108-000-080	0E	C-JUMPER,U	AHLSF	HS-JXM2000
X IF MPX		R 0828	88-108-000-080	0E	C-JUMPER,U	YHSSF	HS-JXM2000
X IF MPX		R 0828	88-108-220-080	0E	C-RES,U 22-1/16W J	S	HS-JXM2000
X IF MPX		R 0829	88-104-820-080	0E	C-RES,V 82-1/16W J	AHLSF	HS-JXM2000
X IF MPX		R 0829	88-104-820-080	0E	C-RES,V 82-1/16W J	S	HS-JXM2000
X IF MPX		R 0829	88-104-820-080	0E	C-RES,V 82-1/16W J	YHSSF	HS-JXM2000
O IF MPX		SFR0801	87-A91-466-040	0E	C-SFR,K 22K H RH03AEC	AHLSF	HS-JXM2000
O IF MPX		SFR0801	87-A91-466-040	0E	C-SFR,K 22K H RH03AEC	S	HS-JXM2000
O IF MPX		SFR0801	87-A91-466-040	0E	C-SFR,K 22K H RH03AEC	YHSSF	HS-JXM2000
O IF MPX		TC 0801	87-011-189-180	1A	C-TRIMMER,CER 10P 4.5X3.2 CTZ	AHLSF	HS-JXM2000
O IF MPX		TC 0801	87-011-189-180	1A	C-TRIMMER,CER 10P 4.5X3.2 CTZ	S	HS-JXM2000
O IF MPX		TC 0801	87-011-189-180	1A	C-TRIMMER,CER 10P 4.5X3.2 CTZ	YHSSF	HS-JXM2000
O IF MPX		X 0801	87-A91-441-080	1B	C-FLTR,CDACV10.7 MG50-A-TC	AHLSF	HS-JXM2000
O IF MPX		X 0801	87-A91-441-080	1B	C-FLTR,CDACV10.7 MG50-A-TC	S	HS-JXM2000
O IF MPX		X 0801	87-A91-441-080	1B	C-FLTR,CDACV10.7 MG50-A-TC	YHSSF	HS-JXM2000
O KNOB			8A-HJ2-011-010	--	KEY,CONT	AHLSF	HS-JXM2000
O KNOB			8A-HJ2-011-010	--	KEY,CONT	S	HS-JXM2000
O KNOB			8A-HJ2-011-010	--	KEY,CONT	YHSSF	HS-JXM2000
O KNOB			8A-HJ2-012-010	1	KNOB,SL JOG	S	HS-JXM2000
O KNOB			8A-HJ2-012-010	1B	KNOB,SL JOG	AHLSF	HS-JXM2000
O KNOB			8A-HJ2-012-010	1B	KNOB,SL JOG	YHSSF	HS-JXM2000
O KNOB			8A-HJ2-013-010	1	KNOB,SL OPEN	S	HS-JXM2000
O KNOB			8A-HJ2-013-010	1B	KNOB,SL OPEN	AHLSF	HS-JXM2000
O KNOB			8A-HJ2-013-010	1B	KNOB,SL OPEN	YHSSF	HS-JXM2000
O KNOB			8A-HJ2-014-010	--	KNOB,SL HOLD	AHLSF	HS-JXM2000
O KNOB			8A-HJ2-014-010	--	KNOB,SL HOLD	S	HS-JXM2000
O KNOB			8A-HJ2-014-010	--	KNOB,SL HOLD	YHSSF	HS-JXM2000
O KNOB			8A-HJ2-015-010	--	KNOB,SL OSC	AHLSF	HS-JXM2000
O KNOB			8A-HJ2-015-010	--	KNOB,SL OSC	S	HS-JXM2000
O KNOB			8A-HJ2-015-010	--	KNOB,SL OSC	YHSSF	HS-JXM2000
O KNOB			8A-HJ2-016-010	--	KNOB,SL REC	AHLSF	HS-JXM2000
O KNOB			8A-HJ2-016-010	--	KNOB,SL REC	S	HS-JXM2000
O KNOB			8A-HJ2-016-010	--	KNOB,SL REC	YHSSF	HS-JXM2000
O KNOB			8A-HJ2-017-010	--	KNOB,LEVER REC	AHLSF	HS-JXM2000
O KNOB			8A-HJ2-017-010	--	KNOB,LEVER REC	S	HS-JXM2000
O KNOB			8A-HJ2-017-010	--	KNOB,LEVER REC	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	LBL, POP		8A-HJ2-970-010	--	LBL, POP D	S	HS-JXM2000
X	LBL, POP		8A-HJ2-971-010	--	LBL, POP AH1	AH1SF	HS-JXM2000
X	LBL, POP		8A-HJ2-971-010	--	LBL, POP AH1	YHSSF	HS-JXM2000
X	LBL, POP		8A-HRL-974-010	0E	LBL, POP 20TH CHINA	AH1SF	HS-JXM2000
X	OTHERS		86-HK4-230-010	0E	SH, JACK 5P	AH1SF	HS-JXM2000
X	OTHERS		86-HK4-230-010	0E	SH, JACK 5P	S	HS-JXM2000
X	OTHERS		86-HK4-230-010	0E	SH, JACK 5P	YHSSF	HS-JXM2000
X	OTHERS		87-HRF-208-010	0E	SH, HIMERON 6-15	AH1SF	HS-JXM2000
X	OTHERS		87-HRF-208-010	0E	SH, HIMERON 6-15	S	HS-JXM2000
X	OTHERS		87-HRF-208-010	0E	SH, HIMERON 6-15	YHSSF	HS-JXM2000
X	OTHERS		88-HR4-204-010	0E	BOX, SHIELD T	AH1SF	HS-JXM2000
X	OTHERS		88-HR4-204-010	0E	BOX, SHIELD T	S	HS-JXM2000
X	OTHERS		88-HR4-204-010	0E	BOX, SHIELD T	YHSSF	HS-JXM2000
X	OTHERS		88-HR4-205-010	0E	BOX, SHIELD B	AH1SF	HS-JXM2000
X	OTHERS		88-HR4-205-010	0E	BOX, SHIELD B	S	HS-JXM2000
X	OTHERS		88-HR4-205-010	0E	BOX, SHIELD B	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-202-010	--	HLDR, LID	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-202-010	--	HLDR, LID	S	HS-JXM2000
O	OTHERS		8A-HJ2-202-010	--	HLDR, LID	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-203-010	0E	HLDR, BATT	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-203-010	0E	HLDR, BATT	S	HS-JXM2000
O	OTHERS		8A-HJ2-204-010	0E	HLDR, MIC	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-204-010	0E	HLDR, MIC	S	HS-JXM2000
O	OTHERS		8A-HJ2-204-010	0E	HLDR, MIC	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-205-010	0E	HLDR, DD CON	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-205-010	0E	HLDR, DD CON	S	HS-JXM2000
O	OTHERS		8A-HJ2-205-010	0E	HLDR, DD CON	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-206-010	0E	PLATE, HP	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-206-010	0E	PLATE, HP	S	HS-JXM2000
O	OTHERS		8A-HJ2-206-010	0E	PLATE, HP	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-207-010	0E	BAT-CONTACT, (-)	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-207-010	0E	BAT-CONTACT, (-)	S	HS-JXM2000
O	OTHERS		8A-HJ2-207-010	0E	BAT-CONTACT, (-)	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-208-010	0E	BAT-CONTACT, (+)	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-208-010	0E	BAT-CONTACT, (+)	S	HS-JXM2000
O	OTHERS		8A-HJ2-208-010	0E	BAT-CONTACT, (+)	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-209-010	0E	BASE, LOCK	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-209-010	0E	BASE, LOCK	S	HS-JXM2000
O	OTHERS		8A-HJ2-209-010	0E	BASE, LOCK	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-210-010	1A	PLATE, OPEN	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-210-010	1A	PLATE, OPEN	S	HS-JXM2000
O	OTHERS		8A-HJ2-210-010	1A	PLATE, OPEN	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-212-010	0E	SPR-P, CASS	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-212-010	0E	SPR-P, CASS	S	HS-JXM2000
O	OTHERS		8A-HJ2-212-010	0E	SPR-P, CASS	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-213-010	1A	SHAFT, ASSY	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-213-010	1A	SHAFT, ASSY	S	HS-JXM2000
O	OTHERS		8A-HJ2-213-010	1A	SHAFT, ASSY	YHSSF	HS-JXM2000
X	OTHERS		8A-HJ2-214-010	--	BAT-CONTACT, BOX (+)	AH1SF	HS-JXM2000
X	OTHERS		8A-HJ2-214-010	--	BAT-CONTACT, BOX (+)	S	HS-JXM2000
X	OTHERS		8A-HJ2-214-010	--	BAT-CONTACT, BOX (+)	YHSSF	HS-JXM2000
X	OTHERS		8A-HJ2-215-010	--	SHAFT, BAT	AH1SF	HS-JXM2000
X	OTHERS		8A-HJ2-215-010	--	SHAFT, BAT	S	HS-JXM2000
X	OTHERS		8A-HJ2-215-010	--	SHAFT, BAT	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-216-010	0E	BAT-CONTACT, BOX (-)	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-216-010	0E	BAT-CONTACT, BOX (-)	S	HS-JXM2000
O	OTHERS		8A-HJ2-216-010	0E	BAT-CONTACT, BOX (-)	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-217-010	0E	SPR-C, REC	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-217-010	0E	SPR-C, REC	S	HS-JXM2000
O	OTHERS		8A-HJ2-217-010	0E	SPR-C, REC	YHSSF	HS-JXM2000
X	OTHERS		8A-HJ2-219-010	--	SH, AD WINDOW	AH1SF	HS-JXM2000
X	OTHERS		8A-HJ2-219-010	--	SH, AD WINDOW	S	HS-JXM2000
X	OTHERS		8A-HJ2-219-010	--	SH, AD WINDOW	YHSSF	HS-JXM2000
X	OTHERS		8A-HJ2-220-010	0E	SH, AD REAR	AH1SF	HS-JXM2000
X	OTHERS		8A-HJ2-220-010	0E	SH, AD REAR	S	HS-JXM2000
X	OTHERS		8A-HJ2-220-010	0E	SH, AD REAR	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-221-010	0E	HLDR, LCD	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-221-010	0E	HLDR, LCD	S	HS-JXM2000
O	OTHERS		8A-HJ2-221-010	0E	HLDR, LCD	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	OTHERS		8A-HJ2-222-010	0E	CONN, RUBBER LCD	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-222-010	0E	CONN, RUBBER LCD	S	HS-JXM2000
O	OTHERS		8A-HJ2-222-010	0E	CONN, RUBBER LCD	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-223-010	0E	PLATE, SW REC	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-223-010	0E	PLATE, SW REC	S	HS-JXM2000
O	OTHERS		8A-HJ2-223-010	0E	PLATE, SW REC	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-224-010	0E	SPR-T, LOCK	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-224-010	0E	SPR-T, LOCK	S	HS-JXM2000
O	OTHERS		8A-HJ2-224-010	0E	SPR-T, LOCK	YHSSF	HS-JXM2000
O	OTHERS		8A-HJ2-229-010	0E	PLATE, LOCK J2	AH1SF	HS-JXM2000
O	OTHERS		8A-HJ2-229-010	0E	PLATE, LOCK J2	S	HS-JXM2000
O	OTHERS		8A-HJ2-229-010	0E	PLATE, LOCK J2	YHSSF	HS-JXM2000
X	OTHERS		8A-HJ2-230-010	--	SH, 14-14-0.05	AH1SF	HS-JXM2000
X	OTHERS		8A-HJ2-230-010	--	SH, 14-14-0.05	S	HS-JXM2000
X	OTHERS		8A-HJ2-230-010	--	SH, 14-14-0.05	YHSSF	HS-JXM2000
X	OTHERS		8A-HR4-202-010	0E	SH, REAR B	AH1SF	HS-JXM2000
X	OTHERS		8A-HR4-202-010	0E	SH, REAR B	S	HS-JXM2000
X	OTHERS		8A-HR4-202-010	0E	SH, REAR B	YHSSF	HS-JXM2000
X	OTHERS		8A-HR4-205-010	--	SPACER, PWB	AH1SF	HS-JXM2000
X	OTHERS		8A-HR4-205-010	--	SPACER, PWB	S	HS-JXM2000
X	OTHERS		8A-HR4-205-010	--	SPACER, PWB	YHSSF	HS-JXM2000
O	OTHERS		8Z-HK4-206-110	1	HLDR, ARM ASSY	S	HS-JXM2000
O	OTHERS		8Z-HK4-206-110	1B	HLDR, ARM ASSY	AH1SF	HS-JXM2000
O	OTHERS		8Z-HK4-206-110	1B	HLDR, ARM ASSY	YHSSF	HS-JXM2000
X	OTHERS		8Z-HK4-207-010	--	HLDR, ARM	AH1SF	HS-JXM2000
X	OTHERS		8Z-HK4-207-010	--	HLDR, ARM	S	HS-JXM2000
X	OTHERS		8Z-HK4-207-010	--	HLDR, ARM	YHSSF	HS-JXM2000
X	OTHERS		8Z-HK4-208-010	--	ARM, LID	AH1SF	HS-JXM2000
X	OTHERS		8Z-HK4-208-010	--	ARM, LID	S	HS-JXM2000
X	OTHERS		8Z-HK4-208-010	--	ARM, LID	YHSSF	HS-JXM2000
X	OTHERS		8Z-HK4-209-010	--	ARM, CHAS	AH1SF	HS-JXM2000
X	OTHERS		8Z-HK4-209-010	--	ARM, CHAS	S	HS-JXM2000
X	OTHERS		8Z-HK4-209-010	--	ARM, CHAS	YHSSF	HS-JXM2000
O	OTHERS		8Z-HK4-210-010	1A	NUT, B-BOX	AH1SF	HS-JXM2000
O	OTHERS		8Z-HK4-210-010	1A	NUT, B-BOX	S	HS-JXM2000
O	OTHERS		8Z-HK4-210-010	1A	NUT, B-BOX	YHSSF	HS-JXM2000
O	OTHERS		8Z-HK4-228-010	0E	SPR-P, LID	AH1SF	HS-JXM2000
O	OTHERS		8Z-HK4-228-010	0E	SPR-P, LID	S	HS-JXM2000
O	OTHERS		8Z-HK4-228-010	0E	SPR-P, LID	YHSSF	HS-JXM2000
X	PACKING		87-056-833-010	0E	BAG, PP 0.03-130-240	AH1SF	HS-JXM2000
X	PACKING		87-056-833-010	0E	BAG, PP 0.03-130-240	S	HS-JXM2000
X	PACKING		87-056-833-010	0E	BAG, PP 0.03-130-240	YHSSF	HS-JXM2000
X	PACKING		8A-HJ2-851-010	2A	CTN, PRINTED AH1SF AIS F1H	AH1SF	HS-JXM2000
X	PACKING		8A-HJ2-852-010	1H	CTN, INNER AH1SF AIS F1	AH1SF	HS-JXM2000
X	PACKING		8A-HJ2-853-010	1H	CTN, OUTER AH1SF AIS F1	AH1SF	HS-JXM2000
X	PACKING		8A-HJ2-854-010	1A	CTN, PRINTED YHSSF AIS F3H	YHSSF	HS-JXM2000
X	PACKING		8A-HJ2-855-010	1A	CTN, INNER YHSSF AIS F3	YHSSF	HS-JXM2000
X	PACKING		8A-HJ2-856-010	1D	CTN, OUTER YHSSF AIS F3	YHSSF	HS-JXM2000
X	PACKING		8A-HJ2-857-010	1A	CTN, PRINTED S AIS F1H	S	HS-JXM2000
X	PACKING		8A-HJ2-859-010	1	CTN, OUTER S	S	HS-JXM2000
X	PACKING		8A-HJ2-860-010	--	PAD, A	YHSSF	HS-JXM2000
O	PHOTO SEN	PS 0501	87-A91-803-040	1B	C-SNSR, 5197K-F25	AH1SF	HS-JXM2000
O	PHOTO SEN	PS 0501	87-A91-803-040	1B	C-SNSR, 5197K-F25	S	HS-JXM2000
O	PHOTO SEN	PS 0501	87-A91-803-040	1B	C-SNSR, 5197K-F25	YHSSF	HS-JXM2000
S	PHOTO SEN	Q 0501	89-341-165-080	0E	C-TR, 2SC4116GR	AH1SF	HS-JXM2000
S	PHOTO SEN	Q 0501	89-341-165-080	0E	C-TR, 2SC4116GR	S	HS-JXM2000
S	PHOTO SEN	Q 0501	89-341-165-080	0E	C-TR, 2SC4116GR	YHSSF	HS-JXM2000
S	PHOTO SEN	Q 0502	87-026-418-080	0E	C-TR, RN1311	AH1SF	HS-JXM2000
S	PHOTO SEN	Q 0502	87-026-418-080	0E	C-TR, RN1311	S	HS-JXM2000
S	PHOTO SEN	Q 0502	87-026-418-080	0E	C-TR, RN1311	YHSSF	HS-JXM2000
X	PHOTO SEN	R 0501	88-108-152-080	0E	C-RES, U 1.5K-1/16W J	AH1SF	HS-JXM2000
X	PHOTO SEN	R 0501	88-108-152-080	0E	C-RES, U 1.5K-1/16W J	S	HS-JXM2000
X	PHOTO SEN	R 0501	88-108-152-080	0E	C-RES, U 1.5K-1/16W J	YHSSF	HS-JXM2000
X	PHOTO SEN	R 0502	88-108-474-080	0E	C-RES, U 470K-1/16W J	AH1SF	HS-JXM2000
X	PHOTO SEN	R 0502	88-108-474-080	0E	C-RES, U 470K-1/16W J	S	HS-JXM2000
X	PHOTO SEN	R 0502	88-108-474-080	0E	C-RES, U 470K-1/16W J	YHSSF	HS-JXM2000
X	PHOTO SEN	R 0503	88-108-225-080	0E	C-RES, U 2.2M-1/16W J	AH1SF	HS-JXM2000
X	PHOTO SEN	R 0503	88-108-225-080	0E	C-RES, U 2.2M-1/16W J	S	HS-JXM2000
X	PHOTO SEN	R 0503	88-108-225-080	0E	C-RES, U 2.2M-1/16W J	YHSSF	HS-JXM2000
X	PLATE		87-B40-154-010	0E	LBL, BAR-CODE CU	S	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	PLATE		87-B40-154-010	0E	LBL, BAR-CODE CU	AH1SF	HS-JXM2000
X	PLATE		87-B40-154-010	0E	LBL, BAR-CODE CU	YHSSF	HS-JXM2000
X	PLATE		87-B40-281-010	0E	LBL, BAR-CODE A 35X8	AH1SF	HS-JXM2000
X	PLATE		87-B40-281-010	0E	LBL, BAR-CODE A 35X8	S	HS-JXM2000
X	PLATE		87-B40-281-010	0E	LBL, BAR-CODE A 35X8	YHSSF	HS-JXM2000
X	PLATE		8A-HJ2-018-010	0E	LBL, TUNER	AH1SF	HS-JXM2000
X	PLATE		8A-HJ2-018-010	0E	LBL, TUNER	YHSSF	HS-JXM2000
X	PLATE		8A-HJ2-019-010	1A	SH, CHAS	AH1SF	HS-JXM2000
X	PLATE		8A-HJ2-019-010	1A	SH, CHAS	YHSSF	HS-JXM2000
X	PLATE		8A-HJ2-020-010	0E	LBL, TUNER D	S	HS-JXM2000
X	PLATE		8A-HJ2-022-010	--	SH, CHAS D	S	HS-JXM2000
O	POWER SUPPLY	C 0651	87-A11-813-080	0E	C-CAP, E 100-4 MVS (4.6MAX)	AH1SF	HS-JXM2000
O	POWER SUPPLY	C 0651	87-A11-813-080	0E	C-CAP, E 100-4 MVS (4.6MAX)	S	HS-JXM2000
O	POWER SUPPLY	C 0651	87-A11-813-080	0E	C-CAP, E 100-4 MVS (4.6MAX)	YHSSF	HS-JXM2000
O	POWER SUPPLY	C 0652	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	AH1SF	HS-JXM2000
O	POWER SUPPLY	C 0652	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	S	HS-JXM2000
O	POWER SUPPLY	C 0652	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	YHSSF	HS-JXM2000
O	POWER SUPPLY	C 0653	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	AH1SF	HS-JXM2000
O	POWER SUPPLY	C 0653	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	S	HS-JXM2000
O	POWER SUPPLY	C 0653	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	YHSSF	HS-JXM2000
O	POWER SUPPLY	L 0651	87-003-089-110	0E	COIL, 47UH FL5R200F	AH1SF	HS-JXM2000
O	POWER SUPPLY	L 0651	87-003-089-110	0E	COIL, 47UH FL5R200F	S	HS-JXM2000
O	POWER SUPPLY	L 0651	87-003-089-110	0E	COIL, 47UH FL5R200F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0101	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0101	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0101	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0102	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0102	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0102	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0103	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0103	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0103	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0104	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0104	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0104	87-A10-554-080	0E	C-CAP, V 1000P-50 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0105	87-A10-765-080	0E	C-CAP, V 0.033-10 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0105	87-A10-765-080	0E	C-CAP, V 0.033-10 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0105	87-A10-765-080	0E	C-CAP, V 0.033-10 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0106	87-A10-765-080	0E	C-CAP, V 0.033-10 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0106	87-A10-765-080	0E	C-CAP, V 0.033-10 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0106	87-A10-765-080	0E	C-CAP, V 0.033-10 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0107	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0107	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	S	HS-JXM2000
O	PRE-MAIN AMP	C 0107	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0108	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0108	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	S	HS-JXM2000
O	PRE-MAIN AMP	C 0108	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0109	87-016-114-080	0E	C-CAP, U 0.01-25 J B GRM	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0109	87-016-114-080	0E	C-CAP, U 0.01-25 J B GRM	S	HS-JXM2000
O	PRE-MAIN AMP	C 0109	87-016-114-080	0E	C-CAP, U 0.01-25 J B GRM	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0110	87-016-114-080	0E	C-CAP, U 0.01-25 J B GRM	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0110	87-016-114-080	0E	C-CAP, U 0.01-25 J B GRM	S	HS-JXM2000
O	PRE-MAIN AMP	C 0110	87-016-114-080	0E	C-CAP, U 0.01-25 J B GRM	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0111	87-A10-025-080	0E	C-CAP, U 0.22-16 Z F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0111	87-A10-025-080	0E	C-CAP, U 0.22-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0111	87-A10-025-080	0E	C-CAP, U 0.22-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0112	87-012-286-080	0E	C-CAP, U 0.01-25 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0112	87-012-286-080	0E	C-CAP, U 0.01-25 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0112	87-012-286-080	0E	C-CAP, U 0.01-25 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0113	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0113	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0113	87-010-831-080	0E	C-CAP, U 0.1-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0114	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0114	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	S	HS-JXM2000
O	PRE-MAIN AMP	C 0114	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0115	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0115	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	S	HS-JXM2000
O	PRE-MAIN AMP	C 0115	87-A10-952-080	0E	C-CAP, TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0116	87-A10-707-080	0E	C-CAP, U 0.47-10 Z F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0116	87-A10-707-080	0E	C-CAP, U 0.47-10 Z F	S	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	PRE-MAIN AMP	C 0116	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0117	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0117	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0117	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0118	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0118	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0118	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0119	87-016-562-080	0E	C-CAP,TN 4.7-10	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0119	87-016-562-080	0E	C-CAP,TN 4.7-10	S	HS-JXM2000
O	PRE-MAIN AMP	C 0119	87-016-562-080	0E	C-CAP,TN 4.7-10	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0120	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0120	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0120	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0121	87-A10-704-080	1A	C-CAP,TN 100-2.5 M B2	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0121	87-A10-704-080	1A	C-CAP,TN 100-2.5 M B2	S	HS-JXM2000
O	PRE-MAIN AMP	C 0121	87-A10-704-080	1A	C-CAP,TN 100-2.5 M B2	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0122	87-A10-704-080	1A	C-CAP,TN 100-2.5 M B2	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0122	87-A10-704-080	1A	C-CAP,TN 100-2.5 M B2	S	HS-JXM2000
O	PRE-MAIN AMP	C 0122	87-A10-704-080	1A	C-CAP,TN 100-2.5 M B2	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0123	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0123	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0123	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0124	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0124	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0124	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0125	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0125	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0125	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0126	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0126	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0126	87-A10-565-080	0E	C-CAP,V 0.1-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0127	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0127	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0127	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0128	87-A10-706-080	0E	C-CAP,U 0.33-16 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0128	87-A10-706-080	0E	C-CAP,U 0.33-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0128	87-A10-706-080	0E	C-CAP,U 0.33-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0129	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0129	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0129	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0130	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0130	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0130	87-A10-707-080	0E	C-CAP,U 0.47-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0131	87-016-562-080	0E	C-CAP,TN 4.7-10	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0131	87-016-562-080	0E	C-CAP,TN 4.7-10	S	HS-JXM2000
O	PRE-MAIN AMP	C 0131	87-016-562-080	0E	C-CAP,TN 4.7-10	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0132	87-A10-260-080	0E	C-CAP,U 0.1-16 K B	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0132	87-A10-260-080	0E	C-CAP,U 0.1-16 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0132	87-A10-260-080	0E	C-CAP,U 0.1-16 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0133	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0133	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0133	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0134	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0134	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0134	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0135	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0135	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0135	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0136	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0136	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0136	87-A11-062-080	0E	C-CAP,S 2.2-16 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0137	87-A10-556-080	0E	C-CAP,V 2200P-50 K B	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0137	87-A10-556-080	0E	C-CAP,V 2200P-50 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0137	87-A10-556-080	0E	C-CAP,V 2200P-50 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0138	87-A10-556-080	0E	C-CAP,V 2200P-50 K B	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0138	87-A10-556-080	0E	C-CAP,V 2200P-50 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0138	87-A10-556-080	0E	C-CAP,V 2200P-50 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0139	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	AHLSF	HS-JXM2000
O	PRE-MAIN AMP	C 0139	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0139	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	PRE-MAIN AMP	C 0140	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0140	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0140	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0141	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0141	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0141	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0142	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0142	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0142	87-A11-049-080	0E	C-CAP,U 1-6.3 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0143	87-016-317-080	0E	C-CAP,TN 2.2-6.3 M	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0143	87-016-317-080	0E	C-CAP,TN 2.2-6.3 M	S	HS-JXM2000
O	PRE-MAIN AMP	C 0143	87-016-317-080	0E	C-CAP,TN 2.2-6.3 M	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0144	87-A10-703-080	1A	C-CAP,TN 47-2.5 M A	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0144	87-A10-703-080	1A	C-CAP,TN 47-2.5 M A	S	HS-JXM2000
O	PRE-MAIN AMP	C 0144	87-A10-703-080	1A	C-CAP,TN 47-2.5 M A	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0145	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0145	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-MAIN AMP	C 0145	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	C 0146	87-010-787-080	0E	C-CAP,U 0.022-25 K B	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	C 0146	87-010-787-080	0E	C-CAP,U 0.022-25 K B	S	HS-JXM2000
O	PRE-MAIN AMP	C 0146	87-010-787-080	0E	C-CAP,U 0.022-25 K B	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	CN 0101	87-A61-132-080	1A	C-CONN,10P H FLZ-SM1-TB	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	CN 0101	87-A61-132-080	1A	C-CONN,10P H FLZ-SM1-TB	S	HS-JXM2000
O	PRE-MAIN AMP	CN 0101	87-A61-132-080	1A	C-CONN,10P H FLZ-SM1-TB	YHSSF	HS-JXM2000
S	PRE-MAIN AMP	D 0101	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	AH1SF	HS-JXM2000
S	PRE-MAIN AMP	D 0101	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	S	HS-JXM2000
S	PRE-MAIN AMP	D 0101	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	YHSSF	HS-JXM2000
S	PRE-MAIN AMP	D 0102	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	AH1SF	HS-JXM2000
S	PRE-MAIN AMP	D 0102	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	S	HS-JXM2000
S	PRE-MAIN AMP	D 0102	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	YHSSF	HS-JXM2000
S	PRE-MAIN AMP	D 0103	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	AH1SF	HS-JXM2000
S	PRE-MAIN AMP	D 0103	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	S	HS-JXM2000
S	PRE-MAIN AMP	D 0103	87-A40-915-040	0E	C-ZENER,02DZ5.1Y	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0101	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0101	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0101	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0102	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0102	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0102	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0103	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0103	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0103	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0104	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0104	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0104	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0105	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0105	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0105	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0106	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0106	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0106	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0107	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0107	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0107	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	FB 0108	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	FB 0108	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	S	HS-JXM2000
O	PRE-MAIN AMP	FB 0108	87-A91-763-080	0E	C-F-BEAD, BK1608LM252	YHSSF	HS-JXM2000
S	PRE-MAIN AMP	IC 0101	87-A21-179-040	1H	C-IC,TA2123AF	AH1SF	HS-JXM2000
S	PRE-MAIN AMP	IC 0101	87-A21-179-040	1H	C-IC,TA2123AF	S	HS-JXM2000
S	PRE-MAIN AMP	IC 0101	87-A21-179-040	1H	C-IC,TA2123AF	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	J 0101	86-HJ2-604-110	1C	JACK,DIA3.5 ST 9P	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	J 0101	86-HJ2-604-110	1C	JACK,DIA3.5 ST 9P	S	HS-JXM2000
O	PRE-MAIN AMP	J 0101	86-HJ2-604-110	1C	JACK,DIA3.5 ST 9P	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	JR 0129	88-104-000-080	0E	C-JUMPER,V	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	JR 0129	88-104-000-080	0E	C-JUMPER,V	S	HS-JXM2000
X	PRE-MAIN AMP	JR 0129	88-104-000-080	0E	C-JUMPER,V	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	JR 0130	88-104-000-080	0E	C-JUMPER,V	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	JR 0130	88-104-000-080	0E	C-JUMPER,V	S	HS-JXM2000
X	PRE-MAIN AMP	JR 0130	88-104-000-080	0E	C-JUMPER,V	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	L 0101	87-HJ2-613-010	0E	COIL,LOADING3.3UH	AH1SF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME	
O	PRE-MAIN AMP	L	0101	87-HJ2-613-010	0E	COIL,LOADING3.3UH	S	HS-JXM2000
O	PRE-MAIN AMP	L	0101	87-HJ2-613-010	0E	COIL,LOADING3.3UH	YHSSF	HS-JXM2000
S	PRE-MAIN AMP	Q	0101	89-113-625-080	0E	C-TR,2SA1362GR	AH1SF	HS-JXM2000
S	PRE-MAIN AMP	Q	0101	89-113-625-080	0E	C-TR,2SA1362GR	S	HS-JXM2000
S	PRE-MAIN AMP	Q	0101	89-113-625-080	0E	C-TR,2SA1362GR	YHSSF	HS-JXM2000
S	PRE-MAIN AMP	Q	0102	87-026-418-080	0E	C-TR,RN1311	AH1SF	HS-JXM2000
S	PRE-MAIN AMP	Q	0102	87-026-418-080	0E	C-TR,RN1311	S	HS-JXM2000
S	PRE-MAIN AMP	Q	0102	87-026-418-080	0E	C-TR,RN1311	YHSSF	HS-JXM2000
S	PRE-MAIN AMP	Q	0103	89-341-165-080	0E	C-TR,2SC4116GR	AH1SF	HS-JXM2000
S	PRE-MAIN AMP	Q	0103	89-341-165-080	0E	C-TR,2SC4116GR	S	HS-JXM2000
S	PRE-MAIN AMP	Q	0103	89-341-165-080	0E	C-TR,2SC4116GR	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0101	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0101	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0101	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0102	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0102	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0102	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0103	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0103	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0103	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0104	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0104	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0104	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0105	88-104-393-080	0E	C-RES,V 39K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0105	88-104-393-080	0E	C-RES,V 39K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0105	88-104-393-080	0E	C-RES,V 39K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0106	88-104-393-080	0E	C-RES,V 39K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0106	88-104-393-080	0E	C-RES,V 39K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0106	88-104-393-080	0E	C-RES,V 39K-1/16W J	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	R	0107	87-022-292-080	0E	C-RES,U 330K-1/16W F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	R	0107	87-022-292-080	0E	C-RES,U 330K-1/16W F	S	HS-JXM2000
O	PRE-MAIN AMP	R	0107	87-022-292-080	0E	C-RES,U 330K-1/16W F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	R	0108	87-022-292-080	0E	C-RES,U 330K-1/16W F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	R	0108	87-022-292-080	0E	C-RES,U 330K-1/16W F	S	HS-JXM2000
O	PRE-MAIN AMP	R	0108	87-022-292-080	0E	C-RES,U 330K-1/16W F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	R	0109	87-022-243-080	0E	C-RES,U 15K-1/16W F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	R	0109	87-022-243-080	0E	C-RES,U 15K-1/16W F	S	HS-JXM2000
O	PRE-MAIN AMP	R	0109	87-022-243-080	0E	C-RES,U 15K-1/16W F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	R	0110	87-022-243-080	0E	C-RES,U 15K-1/16W F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	R	0110	87-022-243-080	0E	C-RES,U 15K-1/16W F	S	HS-JXM2000
O	PRE-MAIN AMP	R	0110	87-022-243-080	0E	C-RES,U 15K-1/16W F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	R	0111	87-022-437-080	0E	C-RES,U 430-1/16W F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	R	0111	87-022-437-080	0E	C-RES,U 430-1/16W F	S	HS-JXM2000
O	PRE-MAIN AMP	R	0111	87-022-437-080	0E	C-RES,U 430-1/16W F	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	R	0112	87-022-437-080	0E	C-RES,U 430-1/16W F	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	R	0112	87-022-437-080	0E	C-RES,U 430-1/16W F	S	HS-JXM2000
O	PRE-MAIN AMP	R	0112	87-022-437-080	0E	C-RES,U 430-1/16W F	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0113	88-104-272-080	0E	C-RES,V 2.7K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0113	88-104-272-080	0E	C-RES,V 2.7K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0113	88-104-272-080	0E	C-RES,V 2.7K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0114	88-104-272-080	0E	C-RES,V 2.7K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0114	88-104-272-080	0E	C-RES,V 2.7K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0114	88-104-272-080	0E	C-RES,V 2.7K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0115	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0115	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0115	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0116	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0116	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0116	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0117	88-104-333-080	0E	C-RES,V 33K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0117	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0117	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0118	88-104-333-080	0E	C-RES,V 33K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0118	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0118	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0119	88-104-564-080	0E	C-RES,V 560K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0119	88-104-564-080	0E	C-RES,V 560K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0119	88-104-564-080	0E	C-RES,V 560K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R	0120	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R	0120	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R	0120	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	PRE-MAIN AMP	R 0120	88-104-182-080	0E	C-RES,V 1.8K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0121	88-104-103-080	0E	C-RES,V 10K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0121	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0121	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0122	88-104-153-080	0E	C-RES,V 15K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0122	88-104-153-080	0E	C-RES,V 15K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0122	88-104-153-080	0E	C-RES,V 15K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0123	88-104-229-080	0E	C-RES,V 2.2-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0123	88-104-229-080	0E	C-RES,V 2.2-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0123	88-104-229-080	0E	C-RES,V 2.2-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0124	88-104-229-080	0E	C-RES,V 2.2-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0124	88-104-229-080	0E	C-RES,V 2.2-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0124	88-104-229-080	0E	C-RES,V 2.2-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0125	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0125	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0125	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0126	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0126	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0126	88-104-472-080	0E	C-RES,V 4.7K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0127	88-104-229-080	0E	C-RES,V 2.2-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0127	88-104-229-080	0E	C-RES,V 2.2-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0127	88-104-229-080	0E	C-RES,V 2.2-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0128	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0128	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0128	88-104-332-080	0E	C-RES,V 3.3K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0131	88-104-333-080	0E	C-RES,V 33K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0131	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0131	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0132	88-104-333-080	0E	C-RES,V 33K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0132	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0132	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0133	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0133	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0133	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0134	88-104-104-080	0E	C-RES,V 100K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0134	88-104-104-080	0E	C-RES,V 100K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0134	88-104-104-080	0E	C-RES,V 100K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0135	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0135	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0135	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0136	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0136	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0136	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0137	88-104-224-080	0E	C-RES,V 220K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0137	88-104-224-080	0E	C-RES,V 220K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0137	88-104-224-080	0E	C-RES,V 220K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0139	88-104-183-080	0E	C-RES,V 18K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0139	88-104-183-080	0E	C-RES,V 18K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0139	88-104-183-080	0E	C-RES,V 18K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0140	88-104-333-080	0E	C-RES,V 33K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0140	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0140	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0141	88-104-333-080	0E	C-RES,V 33K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0141	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0141	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0142	88-104-333-080	0E	C-RES,V 33K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0142	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0142	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0143	88-104-333-080	0E	C-RES,V 33K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0143	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0143	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0144	88-104-333-080	0E	C-RES,V 33K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0144	88-104-333-080	0E	C-RES,V 33K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0144	88-104-333-080	0E	C-RES,V 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0145	88-104-224-080	0E	C-RES,V 220K-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0145	88-104-224-080	0E	C-RES,V 220K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0145	88-104-224-080	0E	C-RES,V 220K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0147	88-104-229-080	0E	C-RES,V 2.2-1/16W J	AHLSF	HS-JXM2000
X	PRE-MAIN AMP	R 0147	88-104-229-080	0E	C-RES,V 2.2-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0147	88-104-229-080	0E	C-RES,V 2.2-1/16W J	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	PRE-MAIN AMP	R 0148	88-104-229-080	0E	C-RES,V 2.2-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R 0148	88-104-229-080	0E	C-RES,V 2.2-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0148	88-104-229-080	0E	C-RES,V 2.2-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0149	88-108-102-080	0E	C-RES,U 1K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R 0149	88-108-102-080	0E	C-RES,U 1K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0149	88-108-102-080	0E	C-RES,U 1K-1/16W J	YHSSF	HS-JXM2000
X	PRE-MAIN AMP	R 0150	88-108-102-080	0E	C-RES,U 1K-1/16W J	AH1SF	HS-JXM2000
X	PRE-MAIN AMP	R 0150	88-108-102-080	0E	C-RES,U 1K-1/16W J	S	HS-JXM2000
X	PRE-MAIN AMP	R 0150	88-108-102-080	0E	C-RES,U 1K-1/16W J	YHSSF	HS-JXM2000
O	PRE-MAIN AMP	VR 0101	87-A91-757-010	0E	VR,RTRY 20KAX2 V RK10J12E0	AH1SF	HS-JXM2000
O	PRE-MAIN AMP	VR 0101	87-A91-757-010	0E	VR,RTRY 20KAX2 V RK10J12E0	S	HS-JXM2000
O	PRE-MAIN AMP	VR 0101	87-A91-757-010	0E	VR,RTRY 20KAX2 V RK10J12E0	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0201	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0201	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	S	HS-JXM2000
O	PRE-REC AMP	C 0201	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0202	87-015-923-080	0E	C-CAP,TN 0.22-35 M ECS	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0202	87-015-923-080	0E	C-CAP,TN 0.22-35 M ECS	S	HS-JXM2000
O	PRE-REC AMP	C 0202	87-015-923-080	0E	C-CAP,TN 0.22-35 M ECS	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0203	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0203	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	S	HS-JXM2000
O	PRE-REC AMP	C 0203	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0204	87-010-746-080	1A	C-CAP,TN 10-4 M 125	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0204	87-010-746-080	1A	C-CAP,TN 10-4 M 125	S	HS-JXM2000
O	PRE-REC AMP	C 0204	87-010-746-080	1A	C-CAP,TN 10-4 M 125	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0205	87-A10-543-080	0E	C-CAP,V 100P-50 J CH	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0205	87-A10-543-080	0E	C-CAP,V 100P-50 J CH	S	HS-JXM2000
O	PRE-REC AMP	C 0205	87-A10-543-080	0E	C-CAP,V 100P-50 J CH	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0206	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0206	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	S	HS-JXM2000
O	PRE-REC AMP	C 0206	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0207	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0207	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0207	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0208	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0208	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0208	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0209	87-016-562-080	0E	C-CAP,TN 4.7-10	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0209	87-016-562-080	0E	C-CAP,TN 4.7-10	S	HS-JXM2000
O	PRE-REC AMP	C 0209	87-016-562-080	0E	C-CAP,TN 4.7-10	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0210	87-016-562-080	0E	C-CAP,TN 4.7-10	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0210	87-016-562-080	0E	C-CAP,TN 4.7-10	S	HS-JXM2000
O	PRE-REC AMP	C 0210	87-016-562-080	0E	C-CAP,TN 4.7-10	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0211	87-012-274-080	0E	C-CAP,U 1000P-50 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0211	87-012-274-080	0E	C-CAP,U 1000P-50 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0211	87-012-274-080	0E	C-CAP,U 1000P-50 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0212	87-012-274-080	0E	C-CAP,U 1000P-50 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0212	87-012-274-080	0E	C-CAP,U 1000P-50 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0212	87-012-274-080	0E	C-CAP,U 1000P-50 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0213	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0213	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	S	HS-JXM2000
O	PRE-REC AMP	C 0213	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0214	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0214	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	S	HS-JXM2000
O	PRE-REC AMP	C 0214	87-A11-157-080	0E	C-CAP,TN 1-16 M A F93	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0215	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0215	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0215	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0216	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0216	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0216	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0217	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0217	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0217	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0218	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0218	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0218	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0219	87-010-746-080	1A	C-CAP,TN 10-4 M 125	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0219	87-010-746-080	1A	C-CAP,TN 10-4 M 125	S	HS-JXM2000
O	PRE-REC AMP	C 0219	87-010-746-080	1A	C-CAP,TN 10-4 M 125	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0220	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	AH1SF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	PRE-REC AMP	C 0220	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	S	HS-JXM2000
O	PRE-REC AMP	C 0220	87-A10-952-080	0E	C-CAP,TN 22-4 M A MCM	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0221	87-016-286-080	0E	C-CAP,TN 2.2-6.3 M	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0221	87-016-286-080	0E	C-CAP,TN 2.2-6.3 M	S	HS-JXM2000
O	PRE-REC AMP	C 0221	87-016-286-080	0E	C-CAP,TN 2.2-6.3 M	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0222	87-A11-282-080	0E	C-CAP,S 1-16 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0222	87-A11-282-080	0E	C-CAP,S 1-16 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0222	87-A11-282-080	0E	C-CAP,S 1-16 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0223	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0223	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0223	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0224	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0224	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0224	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0225	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0225	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0225	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0226	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0226	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0226	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0227	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0227	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0227	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0228	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0228	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0228	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0229	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0229	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0229	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0230	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0230	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0230	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0231	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0231	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0231	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0232	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0232	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	S	HS-JXM2000
O	PRE-REC AMP	C 0232	87-A10-758-080	0E	C-CAP,V 3300P-50 K B	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0233	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0233	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0233	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0234	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0234	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0234	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0235	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0235	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0235	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
O	PRE-REC AMP	C 0236	87-A10-262-080	0E	C-CAP,U 1-10 Z F	AH1SF	HS-JXM2000
O	PRE-REC AMP	C 0236	87-A10-262-080	0E	C-CAP,U 1-10 Z F	S	HS-JXM2000
O	PRE-REC AMP	C 0236	87-A10-262-080	0E	C-CAP,U 1-10 Z F	YHSSF	HS-JXM2000
S	PRE-REC AMP	IC 0201	87-A21-651-030	1H	C-IC,LA3235W	AH1SF	HS-JXM2000
S	PRE-REC AMP	IC 0201	87-A21-651-030	1H	C-IC,LA3235W	S	HS-JXM2000
S	PRE-REC AMP	IC 0201	87-A21-651-030	1H	C-IC,LA3235W	YHSSF	HS-JXM2000
O	PRE-REC AMP	J 0201	87-A60-272-010	1A	JACK,3.5 ST 4P	AH1SF	HS-JXM2000
O	PRE-REC AMP	J 0201	87-A60-272-010	1A	JACK,3.5 ST 4P	S	HS-JXM2000
O	PRE-REC AMP	J 0201	87-A60-272-010	1A	JACK,3.5 ST 4P	YHSSF	HS-JXM2000
X	PRE-REC AMP	JR 0201	88-108-000-080	0E	C-JUMPER,U	AH1SF	HS-JXM2000
X	PRE-REC AMP	JR 0201	88-108-000-080	0E	C-JUMPER,U	S	HS-JXM2000
X	PRE-REC AMP	JR 0201	88-108-000-080	0E	C-JUMPER,U	YHSSF	HS-JXM2000
X	PRE-REC AMP	JR 0201	88-108-000-080	0E	C-JUMPER,U	AH1SF	HS-JXM2000
X	PRE-REC AMP	JR 0201	88-108-000-080	0E	C-JUMPER,U	S	HS-JXM2000
X	PRE-REC AMP	JR 0201	88-108-000-080	0E	C-JUMPER,U	YHSSF	HS-JXM2000
X	PRE-REC AMP	JR 0228	88-108-000-080	0E	C-JUMPER,U	AH1SF	HS-JXM2000
X	PRE-REC AMP	JR 0228	88-108-000-080	0E	C-JUMPER,U	S	HS-JXM2000
X	PRE-REC AMP	JR 0228	88-108-000-080	0E	C-JUMPER,U	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0201	87-A30-499-040	1A	C-FET,2SK2009	AH1SF	HS-JXM2000
S	PRE-REC AMP	Q 0201	87-A30-499-040	1A	C-FET,2SK2009	S	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
S	PRE-REC AMP	Q 0201	87-A30-499-040	1A	C-FET,2SK2009	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0202	87-A30-499-040	1A	C-FET,2SK2009	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0202	87-A30-499-040	1A	C-FET,2SK2009	S	HS-JXM2000
S	PRE-REC AMP	Q 0202	87-A30-499-040	1A	C-FET,2SK2009	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0203	87-A30-499-040	1A	C-FET,2SK2009	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0203	87-A30-499-040	1A	C-FET,2SK2009	S	HS-JXM2000
S	PRE-REC AMP	Q 0203	87-A30-499-040	1A	C-FET,2SK2009	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0204	87-A30-499-040	1A	C-FET,2SK2009	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0204	87-A30-499-040	1A	C-FET,2SK2009	S	HS-JXM2000
S	PRE-REC AMP	Q 0204	87-A30-499-040	1A	C-FET,2SK2009	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0205	87-A30-500-040	0E	C-FET,2SJ344	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0205	87-A30-500-040	0E	C-FET,2SJ344	S	HS-JXM2000
S	PRE-REC AMP	Q 0205	87-A30-500-040	0E	C-FET,2SJ344	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0206	87-A30-500-040	0E	C-FET,2SJ344	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0206	87-A30-500-040	0E	C-FET,2SJ344	S	HS-JXM2000
S	PRE-REC AMP	Q 0206	87-A30-500-040	0E	C-FET,2SJ344	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0207	89-113-625-080	0E	C-TR,2SA1362GR	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0207	89-113-625-080	0E	C-TR,2SA1362GR	S	HS-JXM2000
S	PRE-REC AMP	Q 0207	89-113-625-080	0E	C-TR,2SA1362GR	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0208	87-026-527-080	0E	C-TR,HN1A01FU	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0208	87-026-527-080	0E	C-TR,HN1A01FU	S	HS-JXM2000
S	PRE-REC AMP	Q 0209	87-A30-228-080	0E	C-TR,UMB3	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0209	87-A30-228-080	0E	C-TR,UMB3	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0209	87-A30-228-080	0E	C-TR,UMB3	S	HS-JXM2000
S	PRE-REC AMP	Q 0210	87-A30-228-080	0E	C-TR,UMB3	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0210	87-A30-228-080	0E	C-TR,UMB3	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0210	87-A30-228-080	0E	C-TR,UMB3	S	HS-JXM2000
S	PRE-REC AMP	Q 0210	87-A30-228-080	0E	C-TR,UMB3	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0211	87-A30-378-040	0E	C-TR,UMG4N	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0211	87-A30-378-040	0E	C-TR,UMG4N	S	HS-JXM2000
S	PRE-REC AMP	Q 0211	87-A30-378-040	0E	C-TR,UMG4N	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0212	87-A30-378-040	0E	C-TR,UMG4N	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0212	87-A30-378-040	0E	C-TR,UMG4N	S	HS-JXM2000
S	PRE-REC AMP	Q 0212	87-A30-378-040	0E	C-TR,UMG4N	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0213	87-026-648-080	0E	C-TR,UPA608T	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0213	87-026-648-080	0E	C-TR,UPA608T	S	HS-JXM2000
S	PRE-REC AMP	Q 0213	87-026-648-080	0E	C-TR,UPA608T	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0214	87-026-521-080	0E	C-TR,HN1C01FUGR	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0214	87-026-521-080	0E	C-TR,HN1C01FUGR	S	HS-JXM2000
S	PRE-REC AMP	Q 0214	87-026-521-080	0E	C-TR,HN1C01FUGR	YHSSF	HS-JXM2000
S	PRE-REC AMP	Q 0215	87-A30-336-040	0E	C-TR,UMH4N	AHLSF	HS-JXM2000
S	PRE-REC AMP	Q 0215	87-A30-336-040	0E	C-TR,UMH4N	S	HS-JXM2000
S	PRE-REC AMP	Q 0215	87-A30-336-040	0E	C-TR,UMH4N	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0201	88-104-155-080	0E	C-RES,V 1.5M-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0201	88-104-155-080	0E	C-RES,V 1.5M-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0201	88-104-155-080	0E	C-RES,V 1.5M-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0202	88-104-471-080	0E	C-RES,V 470-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0202	88-104-471-080	0E	C-RES,V 470-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0202	88-104-471-080	0E	C-RES,V 470-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0203	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0203	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0203	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0204	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0204	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0204	88-104-152-080	0E	C-RES,V 1.5K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0205	88-104-681-080	0E	C-RES,V 680-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0205	88-104-681-080	0E	C-RES,V 680-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0205	88-104-681-080	0E	C-RES,V 680-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0206	88-104-681-080	0E	C-RES,V 680-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0206	88-104-681-080	0E	C-RES,V 680-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0206	88-104-681-080	0E	C-RES,V 680-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0207	88-104-471-080	0E	C-RES,V 470-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0207	88-104-471-080	0E	C-RES,V 470-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0207	88-104-471-080	0E	C-RES,V 470-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0208	88-104-471-080	0E	C-RES,V 470-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0208	88-104-471-080	0E	C-RES,V 470-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0208	88-104-471-080	0E	C-RES,V 470-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0209	88-108-824-080	0E	C-RES,U 820K-1/16W J	AHLSF	HS-JXM2000
X	PRE-REC AMP	R 0209	88-108-824-080	0E	C-RES,U 820K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0209	88-108-824-080	0E	C-RES,U 820K-1/16W J	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	PRE-REC AMP	R 0210	88-108-824-080	0E	C-RES,U 820K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0210	88-108-824-080	0E	C-RES,U 820K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0210	88-108-824-080	0E	C-RES,U 820K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0211	88-104-153-080	0E	C-RES,V 15K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0211	88-104-153-080	0E	C-RES,V 15K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0211	88-104-153-080	0E	C-RES,V 15K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0212	88-104-153-080	0E	C-RES,V 15K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0212	88-104-153-080	0E	C-RES,V 15K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0212	88-104-153-080	0E	C-RES,V 15K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0213	88-104-153-080	0E	C-RES,V 15K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0213	88-104-153-080	0E	C-RES,V 15K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0213	88-104-153-080	0E	C-RES,V 15K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0214	88-104-153-080	0E	C-RES,V 15K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0214	88-104-153-080	0E	C-RES,V 15K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0214	88-104-153-080	0E	C-RES,V 15K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0215	88-104-471-080	0E	C-RES,V 470-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0215	88-104-471-080	0E	C-RES,V 470-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0215	88-104-471-080	0E	C-RES,V 470-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0216	88-104-471-080	0E	C-RES,V 470-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0216	88-104-471-080	0E	C-RES,V 470-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0216	88-104-471-080	0E	C-RES,V 470-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0217	88-108-393-080	0E	C-RES,U 39K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0217	88-108-393-080	0E	C-RES,U 39K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0217	88-108-393-080	0E	C-RES,U 39K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0218	88-108-393-080	0E	C-RES,U 39K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0218	88-108-393-080	0E	C-RES,U 39K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0218	88-108-393-080	0E	C-RES,U 39K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0219	88-104-103-080	0E	C-RES,V 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0219	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0219	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0220	88-104-103-080	0E	C-RES,V 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0220	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0220	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0221	88-104-103-080	0E	C-RES,V 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0221	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0221	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0222	88-104-103-080	0E	C-RES,V 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0222	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0222	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0223	88-108-333-080	0E	C-RES,U 33K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0223	88-108-333-080	0E	C-RES,U 33K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0223	88-108-333-080	0E	C-RES,U 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0224	88-108-333-080	0E	C-RES,U 33K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0224	88-108-333-080	0E	C-RES,U 33K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0224	88-108-333-080	0E	C-RES,U 33K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0225	88-108-103-080	0E	C-RES,U 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0225	88-108-103-080	0E	C-RES,U 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0225	88-108-103-080	0E	C-RES,U 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0226	88-108-103-080	0E	C-RES,U 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0226	88-108-103-080	0E	C-RES,U 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0226	88-108-103-080	0E	C-RES,U 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0229	88-108-103-080	0E	C-RES,U 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0229	88-108-103-080	0E	C-RES,U 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0229	88-108-103-080	0E	C-RES,U 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0230	88-108-103-080	0E	C-RES,U 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0230	88-108-103-080	0E	C-RES,U 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0230	88-108-103-080	0E	C-RES,U 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0231	88-104-103-080	0E	C-RES,V 10K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0231	88-104-103-080	0E	C-RES,V 10K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0231	88-104-103-080	0E	C-RES,V 10K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0232	88-104-102-080	0E	C-RES,V 1K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0232	88-104-102-080	0E	C-RES,V 1K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0232	88-104-102-080	0E	C-RES,V 1K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0233	88-104-474-080	0E	C-RES,V 470K-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0233	88-104-474-080	0E	C-RES,V 470K-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0233	88-104-474-080	0E	C-RES,V 470K-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0235	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	AH1SF	HS-JXM2000
X	PRE-REC AMP	R 0235	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0235	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	YHSSF	HS-JXM2000
X	PRE-REC AMP	R 0236	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	AH1SF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
X	PRE-REC AMP	R 0236	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	S	HS-JXM2000
X	PRE-REC AMP	R 0236	88-104-335-080	0E	C-RES,V 3.3M-1/16W J	YHSSF	HS-JXM2000
X	PRINTED MATTERS		87-B50-023-310	0E	SH,PL HS	S	HS-JXM2000
X	PRINTED MATTERS		87-B50-065-010	0E	LIST,FACILITY(S)-TOKYO	AH1SF	HS-JXM2000
X	PRINTED MATTERS		87-B50-067-010	0E	WARR-CARD,D RCS-TOKYO	S	HS-JXM2000
X	PRINTED MATTERS		87-B50-069-010	0E	LIST,SERVICE JP-TOKYO	S	HS-JXM2000
O	PRINTED MATTERS		8A-HJ2-902-010	1B	IB,AH(ECH)S	AH1SF	HS-JXM2000
O	PRINTED MATTERS		8A-HJ2-903-010	1B	IB,YHS(EC)S	YHSSF	HS-JXM2000
O	PRINTED MATTERS		8A-HJ2-908-010	0E	IB,D	S	HS-JXM2000
O	PRINTED MATTERS		8A-HJ2-910-010	0E	IB,AH(CK)	AH1SF	HS-JXM2000
X	PWB,A		8A-HJ2-603-010	--	PWB,SW	AH1SF	HS-JXM2000
X	PWB,A		8A-HJ2-603-010	--	PWB,SW	S	HS-JXM2000
X	PWB,A		8A-HJ2-603-010	--	PWB,SW	YHSSF	HS-JXM2000
X	PWB,A	*	8A-HJ2-601-010	1H	PWB,COMB 2M	AH1SF	HS-JXM2000
X	PWB,A	*	8A-HJ2-601-010	1H	PWB,COMB 2M	S	HS-JXM2000
X	PWB,A	*	8A-HJ2-601-010	1H	PWB,COMB 2M	YHSSF	HS-JXM2000
X	PWB,A	*	8A-HJ2-602-010	--	PWB,MAIN	AH1SF	HS-JXM2000
X	PWB,A	*	8A-HJ2-602-010	--	PWB,MAIN	S	HS-JXM2000
X	PWB,A	*	8A-HJ2-602-010	--	PWB,MAIN	YHSSF	HS-JXM2000
X	PWB,A	*	8A-HJ2-604-010	--	PWB,D.D	AH1SF	HS-JXM2000
X	PWB,A	*	8A-HJ2-604-010	--	PWB,D.D	S	HS-JXM2000
X	PWB,A	*	8A-HJ2-604-010	--	PWB,D.D	YHSSF	HS-JXM2000
O	SCREW		85-HK3-241-010	0E	SCRW-SR,1.4-3CR L	AH1SF	HS-JXM2000
O	SCREW		85-HK3-241-010	0E	SCRW-SR,1.4-3CR L	S	HS-JXM2000
O	SCREW		85-HK3-241-010	0E	SCRW-SR,1.4-3CR L	YHSSF	HS-JXM2000
O	SCREW		87-067-360-010	0E	S-SCREW,+1.4-3.5 CR BLK	AH1SF	HS-JXM2000
O	SCREW		87-067-360-010	0E	S-SCREW,+1.4-3.5 CR BLK	S	HS-JXM2000
O	SCREW		87-067-360-010	0E	S-SCREW,+1.4-3.5 CR BLK	YHSSF	HS-JXM2000
O	SCREW		87-067-732-010	0E	VT2+1.4-3 CR BLK HL	AH1SF	HS-JXM2000
O	SCREW		87-067-732-010	0E	VT2+1.4-3 CR BLK HL	S	HS-JXM2000
O	SCREW		87-067-732-010	0E	VT2+1.4-3 CR BLK HL	YHSSF	HS-JXM2000
O	SCREW		87-067-754-010	0E	V+1.4-1.6 CR N	AH1SF	HS-JXM2000
O	SCREW		87-067-754-010	0E	V+1.4-1.6 CR N	S	HS-JXM2000
O	SCREW		87-067-754-010	0E	V+1.4-1.6 CR N	YHSSF	HS-JXM2000
O	SCREW		87-078-153-010	0E	S-SCREW,SERR1.4-2.5 CR	AH1SF	HS-JXM2000
O	SCREW		87-078-153-010	0E	S-SCREW,SERR1.4-2.5 CR	S	HS-JXM2000
O	SCREW		87-078-153-010	0E	S-SCREW,SERR1.4-2.5 CR	YHSSF	HS-JXM2000
O	SCREW		87-078-186-010	0E	S-SCREW,SR+1.4-1.8 SWCH/CR L	AH1SF	HS-JXM2000
O	SCREW		87-078-186-010	0E	S-SCREW,SR+1.4-1.8 SWCH/CR L	S	HS-JXM2000
O	SCREW		87-078-186-010	0E	S-SCREW,SR+1.4-1.8 SWCH/CR L	YHSSF	HS-JXM2000
O	SCREW		87-078-206-010	0E	S-SCREW,+1.4-1.3 SWCH BKL/RED	AH1SF	HS-JXM2000
O	SCREW		87-078-206-010	0E	S-SCREW,+1.4-1.3 SWCH BKL/RED	S	HS-JXM2000
O	SCREW		87-078-206-010	0E	S-SCREW,+1.4-1.3 SWCH BKL/RED	YHSSF	HS-JXM2000
O	SCREW		87-078-216-010	0E	S-SCREW,SR+1.4-1.4 SWCH BLK B	AH1SF	HS-JXM2000
O	SCREW		87-078-216-010	0E	S-SCREW,SR+1.4-1.4 SWCH BLK B	S	HS-JXM2000
O	SCREW		87-078-216-010	0E	S-SCREW,SR+1.4-1.4 SWCH BLK B	YHSSF	HS-JXM2000
O	SCREW		87-262-511-310	0E	V+1.4-5 BLK	AH1SF	HS-JXM2000
O	SCREW		87-262-511-310	0E	V+1.4-5 BLK	S	HS-JXM2000
O	SCREW		87-262-511-310	0E	V+1.4-5 BLK	YHSSF	HS-JXM2000
O	SCREW		8A-HJ2-227-010	--	S-SCREW,SR+1.4-6.7 CR L	AH1SF	HS-JXM2000
O	SCREW		8A-HJ2-227-010	--	S-SCREW,SR+1.4-6.7 CR L	S	HS-JXM2000
O	SCREW		8A-HJ2-227-010	--	S-SCREW,SR+1.4-6.7 CR L	YHSSF	HS-JXM2000
O	SCREW		8A-HK5-217-010	--	S-SCREW,SERR1.4-6 CR	AH1SF	HS-JXM2000
O	SCREW		8A-HK5-217-010	--	S-SCREW,SERR1.4-6 CR	S	HS-JXM2000
O	SCREW		8A-HK5-217-010	--	S-SCREW,SERR1.4-6 CR	YHSSF	HS-JXM2000
O	SCREW		8Z-HR8-212-010	0E	S-SCREW,+1.4-4.5 CR HL	AH1SF	HS-JXM2000
O	SCREW		8Z-HR8-212-010	0E	S-SCREW,+1.4-4.5 CR HL	S	HS-JXM2000
O	SCREW		8Z-HR8-212-010	0E	S-SCREW,+1.4-4.5 CR HL	YHSSF	HS-JXM2000
X	TAPE TRANSPORT		M8-7ZM-197-040	--	7ZM-1 R1NF	AH1SF	HS-JXM2000
X	TAPE TRANSPORT		M8-7ZM-197-040	--	7ZM-1 R1NF	S	HS-JXM2000
X	TAPE TRANSPORT		M8-7ZM-197-040	--	7ZM-1 R1NF	YHSSF	HS-JXM2000
O	VT DD CONV	C 0901	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	AH1SF	HS-JXM2000
O	VT DD CONV	C 0901	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	S	HS-JXM2000
O	VT DD CONV	C 0901	87-A10-671-080	0E	C-CAP,V 0.022-16 K B	YHSSF	HS-JXM2000
O	VT DD CONV	C 0902	87-A11-282-080	0E	C-CAP,S 1-16 K B	AH1SF	HS-JXM2000
O	VT DD CONV	C 0902	87-A11-282-080	0E	C-CAP,S 1-16 K B	S	HS-JXM2000
O	VT DD CONV	C 0902	87-A11-282-080	0E	C-CAP,S 1-16 K B	YHSSF	HS-JXM2000
O	VT DD CONV	C 0903	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	AH1SF	HS-JXM2000
O	VT DD CONV	C 0903	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	S	HS-JXM2000
O	VT DD CONV	C 0903	87-A10-561-080	0E	C-CAP,V 0.01-16 K B	YHSSF	HS-JXM2000

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.


Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

! C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
O	VT DD CONV	C 0904	87-A10-703-080	1A	C-CAP,TN 47-2.5 M A	AH1SF	HS-JXM2000
O	VT DD CONV	C 0904	87-A10-703-080	1A	C-CAP,TN 47-2.5 M A	S	HS-JXM2000
O	VT DD CONV	C 0904	87-A10-703-080	1A	C-CAP,TN 47-2.5 M A	YHSSF	HS-JXM2000
O	VT DD CONV	C 0905	87-A11-282-080	0E	C-CAP,S 1-16 K B	AH1SF	HS-JXM2000
O	VT DD CONV	C 0905	87-A11-282-080	0E	C-CAP,S 1-16 K B	S	HS-JXM2000
O	VT DD CONV	C 0905	87-A11-282-080	0E	C-CAP,S 1-16 K B	YHSSF	HS-JXM2000
O	VT DD CONV	C 0906	87-A10-539-080	0E	C-CAP,V 47P-50 J CH	AH1SF	HS-JXM2000
O	VT DD CONV	C 0906	87-A10-539-080	0E	C-CAP,V 47P-50 J CH	S	HS-JXM2000
O	VT DD CONV	C 0906	87-A10-539-080	0E	C-CAP,V 47P-50 J CH	YHSSF	HS-JXM2000
O	VT DD CONV	C 0907	87-A10-528-080	0E	C-CAP,V 7.0P-50 D CH	AH1SF	HS-JXM2000
O	VT DD CONV	C 0907	87-A10-528-080	0E	C-CAP,V 7.0P-50 D CH	S	HS-JXM2000
O	VT DD CONV	C 0907	87-A10-528-080	0E	C-CAP,V 7.0P-50 D CH	YHSSF	HS-JXM2000
O	VT DD CONV	C 0908	87-A10-526-080	0E	C-CAP,V 5.0P-50 C CH	AH1SF	HS-JXM2000
O	VT DD CONV	C 0908	87-A10-526-080	0E	C-CAP,V 5.0P-50 C CH	S	HS-JXM2000
O	VT DD CONV	C 0908	87-A10-526-080	0E	C-CAP,V 5.0P-50 C CH	YHSSF	HS-JXM2000
S	VT DD CONV	IC 0901	87-A20-904-080	1B	C-IC,TK11823MTL	AH1SF	HS-JXM2000
S	VT DD CONV	IC 0901	87-A20-904-080	1B	C-IC,TK11823MTL	S	HS-JXM2000
S	VT DD CONV	IC 0901	87-A20-904-080	1B	C-IC,TK11823MTL	YHSSF	HS-JXM2000
O	VT DD CONV	L 0901	87-A50-037-080	1B	C-COIL,D-D 5CDLU 796KHZ	AH1SF	HS-JXM2000
O	VT DD CONV	L 0901	87-A50-037-080	1B	C-COIL,D-D 5CDLU 796KHZ	S	HS-JXM2000
O	VT DD CONV	L 0901	87-A50-037-080	1B	C-COIL,D-D 5CDLU 796KHZ	YHSSF	HS-JXM2000
O	VT DD CONV	L 0902	87-A50-583-080	0E	C-COIL,S 2.2UH K FCI2012H	AH1SF	HS-JXM2000
O	VT DD CONV	L 0902	87-A50-583-080	0E	C-COIL,S 2.2UH K FCI2012H	S	HS-JXM2000
O	VT DD CONV	L 0902	87-A50-583-080	0E	C-COIL,S 2.2UH K FCI2012H	YHSSF	HS-JXM2000
S	VT DD CONV	Q 0901	89-341-165-080	0E	C-TR,2SC4116GR	AH1SF	HS-JXM2000
S	VT DD CONV	Q 0901	89-341-165-080	0E	C-TR,2SC4116GR	S	HS-JXM2000
S	VT DD CONV	Q 0901	89-341-165-080	0E	C-TR,2SC4116GR	YHSSF	HS-JXM2000
S	VT DD CONV	Q 0902	89-508-804-080	1A	C-FET,2SK880Y	AH1SF	HS-JXM2000
S	VT DD CONV	Q 0902	89-508-804-080	1A	C-FET,2SK880Y	S	HS-JXM2000
S	VT DD CONV	Q 0902	89-508-804-080	1A	C-FET,2SK880Y	YHSSF	HS-JXM2000
S	VT DD CONV	Q 0903	87-026-534-080	0E	C-TR,RN4905	AH1SF	HS-JXM2000
S	VT DD CONV	Q 0903	87-026-534-080	0E	C-TR,RN4905	S	HS-JXM2000
S	VT DD CONV	Q 0903	87-026-534-080	0E	C-TR,RN4905	YHSSF	HS-JXM2000
X	VT DD CONV	R 0901	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AH1SF	HS-JXM2000
X	VT DD CONV	R 0901	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	VT DD CONV	R 0901	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	VT DD CONV	R 0902	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AH1SF	HS-JXM2000
X	VT DD CONV	R 0902	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	VT DD CONV	R 0902	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	VT DD CONV	R 0903	88-104-683-080	0E	C-RES,V 68K-1/16W J	AH1SF	HS-JXM2000
X	VT DD CONV	R 0903	88-104-683-080	0E	C-RES,V 68K-1/16W J	S	HS-JXM2000
X	VT DD CONV	R 0903	88-104-683-080	0E	C-RES,V 68K-1/16W J	YHSSF	HS-JXM2000
X	VT DD CONV	R 0904	88-104-102-080	0E	C-RES,V 1K-1/16W J	AH1SF	HS-JXM2000
X	VT DD CONV	R 0904	88-104-102-080	0E	C-RES,V 1K-1/16W J	S	HS-JXM2000
X	VT DD CONV	R 0904	88-104-102-080	0E	C-RES,V 1K-1/16W J	YHSSF	HS-JXM2000
X	VT DD CONV	R 0905	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	AH1SF	HS-JXM2000
X	VT DD CONV	R 0905	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	S	HS-JXM2000
X	VT DD CONV	R 0905	88-104-222-080	0E	C-RES,V 2.2K-1/16W J	YHSSF	HS-JXM2000
X	VT DD CONV	R 0906	88-104-104-080	0E	C-RES,V 100K-1/16W J	AH1SF	HS-JXM2000
X	VT DD CONV	R 0906	88-104-104-080	0E	C-RES,V 100K-1/16W J	S	HS-JXM2000
X	VT DD CONV	R 0906	88-104-104-080	0E	C-RES,V 100K-1/16W J	YHSSF	HS-JXM2000

SCHEMATIC DIAGRAM

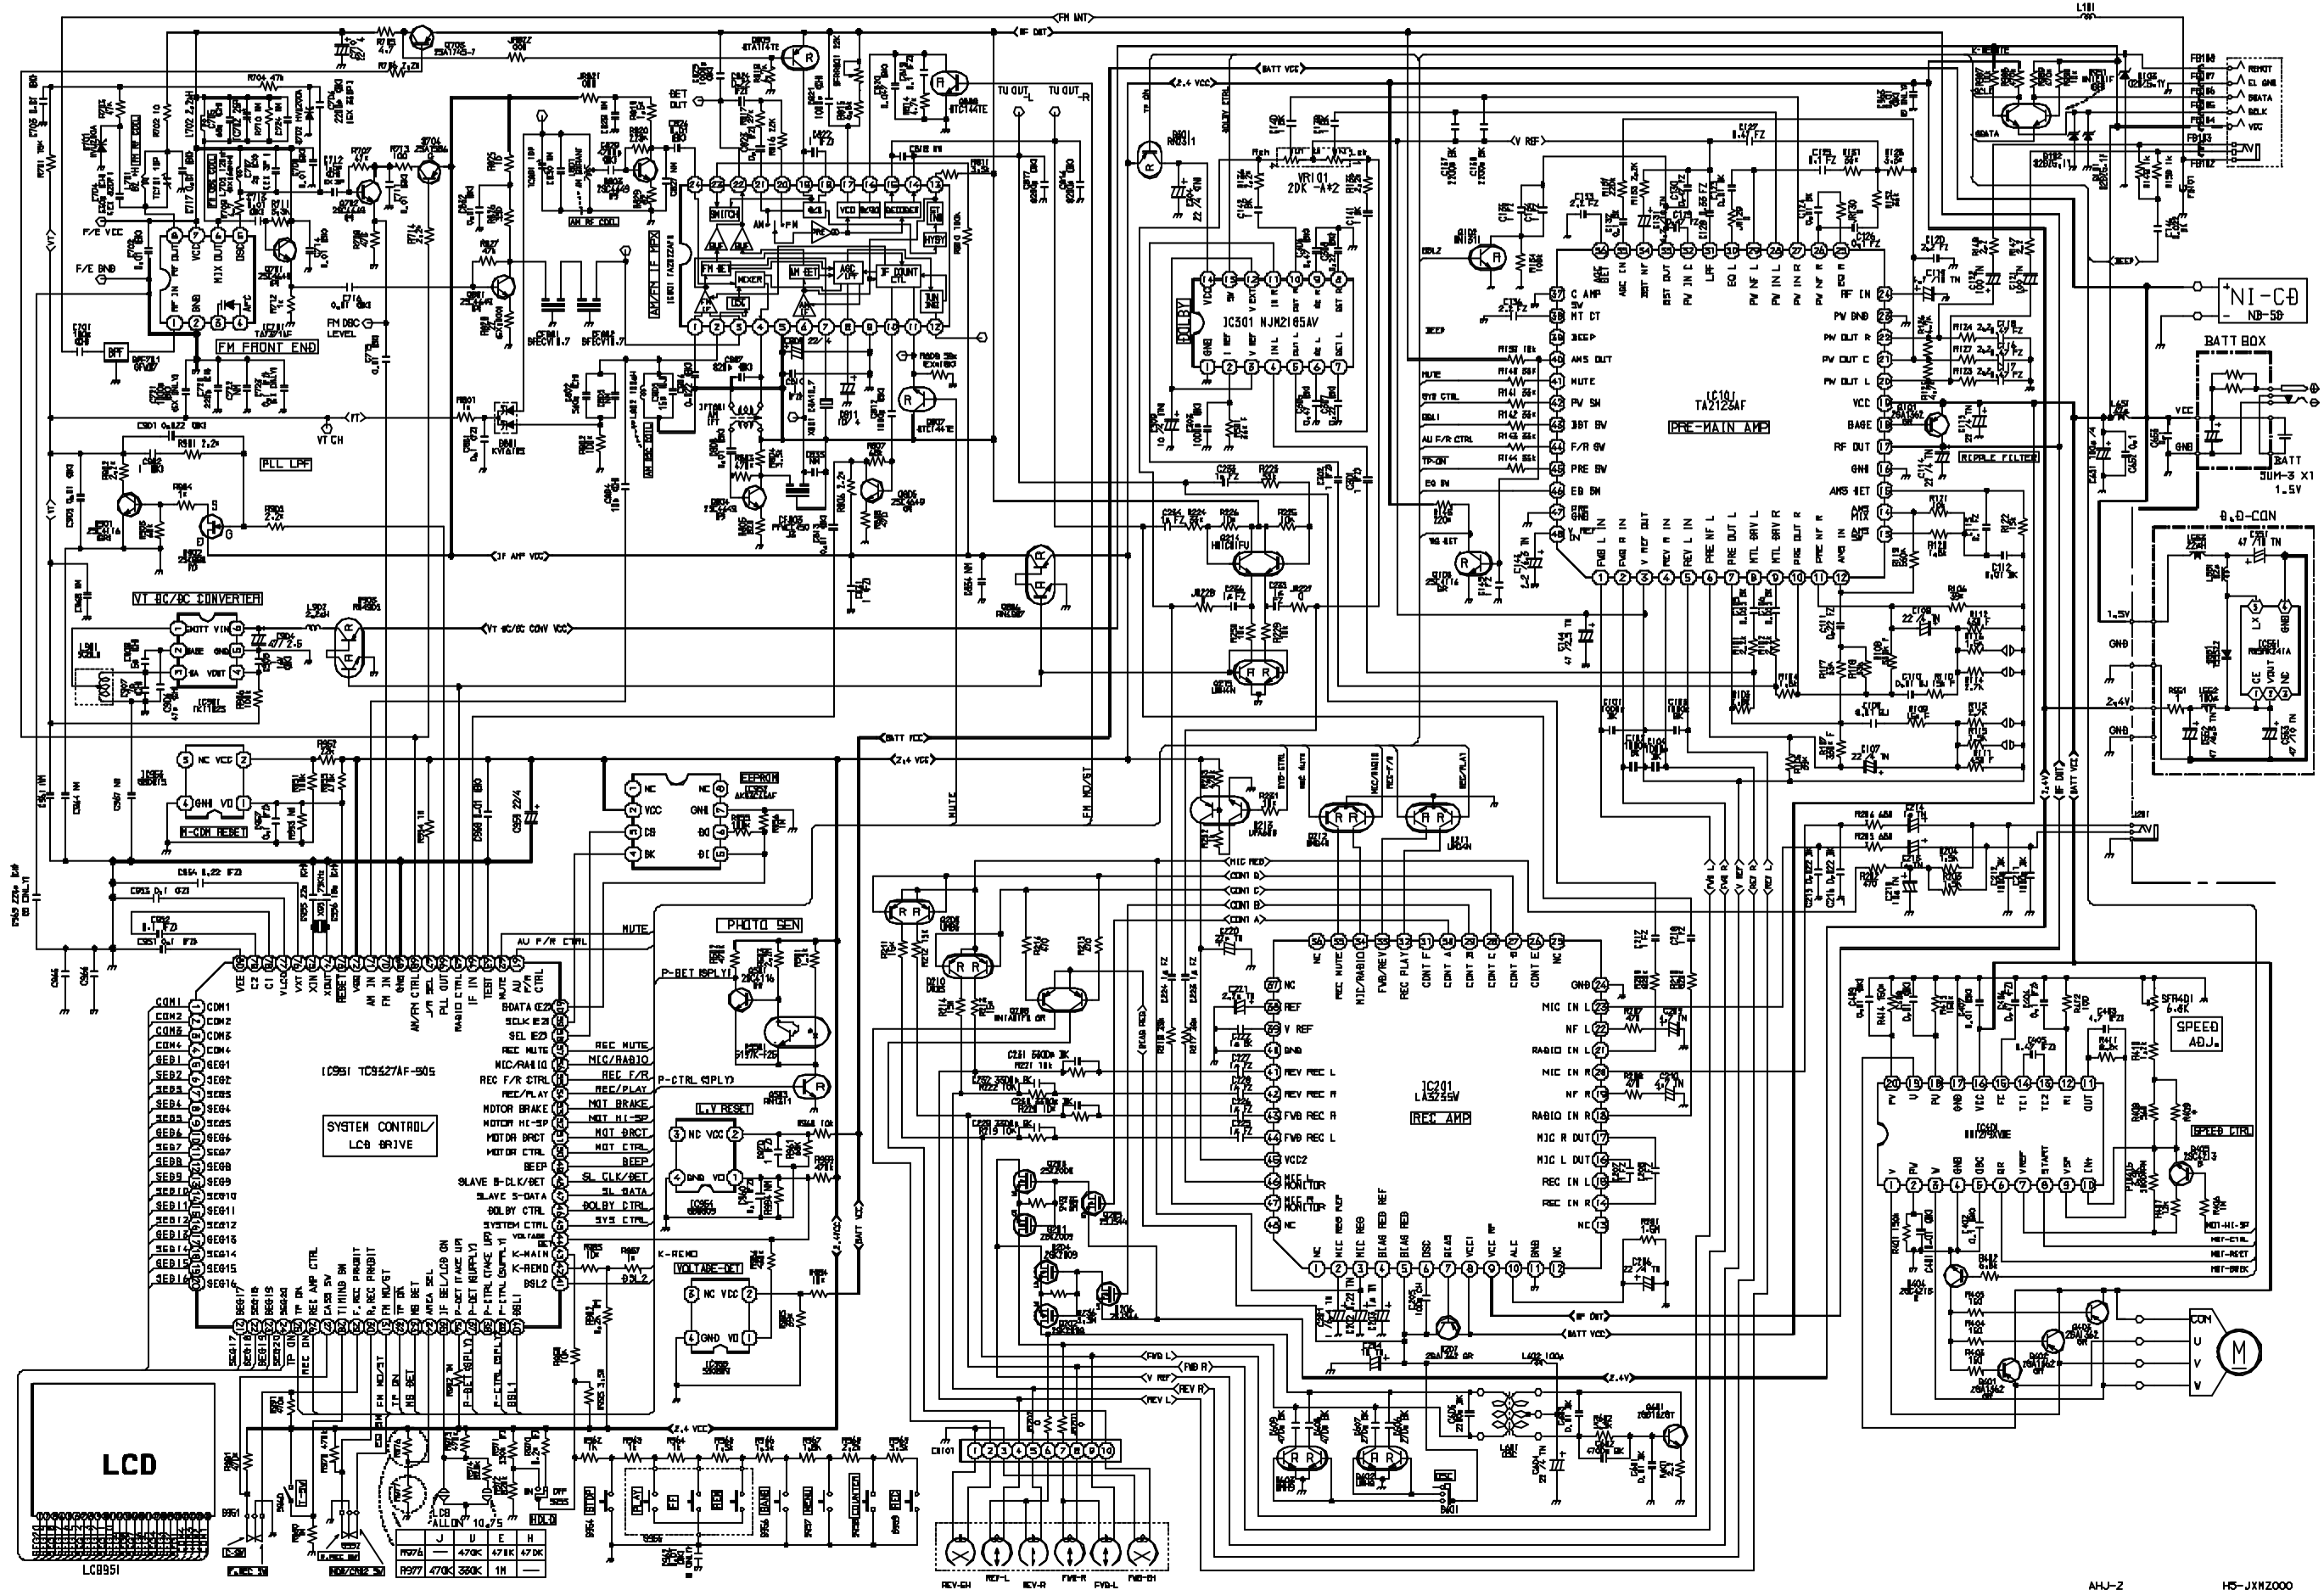

アイワ株式会社 東京都台東区根岸1-5-11 電話(3827)3111 (株番)
AIWA CO., LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111